

COLUSSI ENGINEERING PTY LTD

INTERPUMP AUSTRALASIA A.B.N. 21 000 626 335

53 COLLEGE STREET

GLADESVILLE NSW 2111

www.interpump.com.au

PH:(02) 9817 5433

FAX:(02) 9879 6753

SCANNED

12/200

WARNING

READ OPERATING INSTRUCTIONS BEFORE USE

- DO NOT DIRECT WATER JET AT ANY PART OF THIS MACHINE (IF ELECTRIC POWERED) OR ANY OTHER ELECTRICAL EQUIPMENT.
- DO NOT SPRAY ANY PERSON, ANIMAL, OR PLACE ANY PART OF THE BODY IN FRONT OF THE NOZZLE.
- DO NOT OPERATE WITHOUT WATER.
- DO NOT OPERATE WITH ANY COVERS OR EQUIPMENT REMOVED.
- EYE PROTECTION IS RECOMMENDED.
- ENSURE ADEQUATE VENTILATION WHEN USING MACHINE IN CONFINED AREAS.
- IF MACHINE IS FITTED WITH AN INTERNAL BYPASS DO NOT ALLOW MACHINE TO RUN FOR LONGER THAN 1 MINUTE WITHOUT OPERATING GUN OR TURNING MOTOR OFF.
- DO NOT USE A FUEL POWERED MACHINE INDOORS OR IN CONFINED AREAS, ENSURE ADEQUATE VENTILATION.
- ENSURE ELECTRICAL CORDS AND PLUGS ARE AWAY FROM ANY WATER.
- THE MACHINE MUST NOT BE TAMPERED WITH FOR ANY REASON. IN CASE OF TAMPERING, THE MANUFACTURER DECLINES ANY RESPONSIBILITY ON THE FUNCTIONING AND SAFETY OF THE MACHINE.
- THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR DAMAGES CAUSED BY INCORRECT USE OF THE MACHINE.

START UP PROCEDURES

- CHECK ALL OIL LEVELS AND CONDITION, CHANGE IF NECESSARY.
- ENSURE MACHINE IS ON A HORIZONTAL PLANE TO ENSURE EVEN OIL DISTRIBUTION.
- IF OPERATING A FUEL POWERED MACHINE ENSURE ADEQUATE VENTILATION AND DO NOT PLACE EXHAUST OUTLET TO CLOSE TO ANYTHING.
- IF OPERATING AN ELECTRIC MACHINE ENSURE ELECTRICAL CORDS AND PLUGS ARE AWAY FROM ANY WATER (ALWAYS USE AN ELECTRICAL CORD WITH AN AMP RATING GREATER THAN THAT OF THE MACHINE).
- CHECK WATER FILTER IS CLEAN AND IN GOOD WORKING ORDER.
- CONNECT WATER SUPPLY TO INLET OF PUMP (FOR MACHINES 15LT AND OVER USE ¾ HOSE OR LARGER).
- CONNECT HIGH PRESSURE HOSE AND GUN TO OUTLET OF PUMP.
- TURN ON WATER SUPPLY AND BLEED ANY AIR FROM HOSES BEFORE TURNING MACHINE ON.
- YOU ARE NOW READY TO START THE MACHINE.
- IF MACHINE IS FITTED WITH AN INTERNAL BYPASS DO NOT ALLOW MACHINE TO RUN FOR LONGER THAN 1 MINUTE WITHOUT OPERATING GUN OR TURNING MOTOR OFF.

Manual No 619

Water Pressure Steam Clapper 0359 001 + 002

COLUSSI ENGINEERING PTY LTD

INTERPUMP AUSTRALASIA A.B.N. 21 000 626 335

53 COLLEGE STREET
GLADESVILLE NSW 2111

192010

www.interpump.com.au

PH:(02) 9817 5433

FAX:(02) 9879 6753

ELECTRIC MACHINE RUNNING INSTRUCTIONS

1. Place machine in a fixed, horizontal, well ventilated dry position .
2. Check pump oil level, halfway up Pump Visor.
3. Connect machine to a rated power supply.
4. Connect both hoses and gun to machine.
5. Turn on water supply.
6. Pull trigger and expel air.
7. Turn motor on.
8. Warning – This machine is lethal, Do Not point it at any Body parts, People or Animals.
9. If your machine has not been fitted with a water tank, whilst machine is running do not close trigger for longer than one minute.
After one minute either open trigger or turn machine off.
10. Turn motor off.
11. Disconnect power supply.
12. Turn off water supply.
13. Pull trigger and release any pressure remaining in the system.
14. Disconnect hoses.

MANUAL No 619

Water Pressure Steam Clayer 03590017002.

COLUSSI ENGINEERING PTY LTD

INTERPUMP AUSTRALASIA A.B.N. 21 000 626 335

53 COLLEGE STREET

GLADESVILLE NSW 2111

www.interpump.com.au

SCANNED

(14/10/02)

PH:(02) 9817 5433

FAX:(02) 9879 6753

OIL CHANGES

CHANGE ALL OILS AFTER 20 HRS

REGULAR OIL CHANGES ARE AS FOLLOW

MOTOR	SAE 30	100HR
GEAR BOX	80W-90	400HR
PUMP	SAE 30	400HR