

HPC-Hybrid – Operating Instructions

Manual Mode

Start

- Ensure Toggle switch is in “0” position and adjust the lamps **A**
- Turn Toggle switch up into “2” position **A** MP Nano will then turn on
- Ensure MP Nano is in manual mode (Auto LED above “AUTO” button **H** is off)
- Ensure RCDs **B** and all MCBs **C** are switched on
- Press MP Nano “START/I” button **D** and turn LED switch **E** into “MANUAL ON” position
- Use Mast control lever **F** to rise/lower the mast

Stop


- Turn LED switch **E** into “MANUAL OFF” position
- Press MP Nano “STOP/O” button **G** to stop the engine
- Return the Toggle switch **A** to “0” position

Hybrid Auto Mode

- Ensure RCDs **B** and all MCBs **C** are switched on
- Turn Toggle switch **A** into “2” position
- Press MP Nano “AUTO” Button **H** once, ensure the led light above the “AUTO” button is on
- Turn LED switch **E** into desired position

Mains Auto Mode

- Ensure RCDs **B** and all MCBs **C** are switched on
- Turn Toggle switch **A** into “1” position
- Turn LED switch **E** into desired position

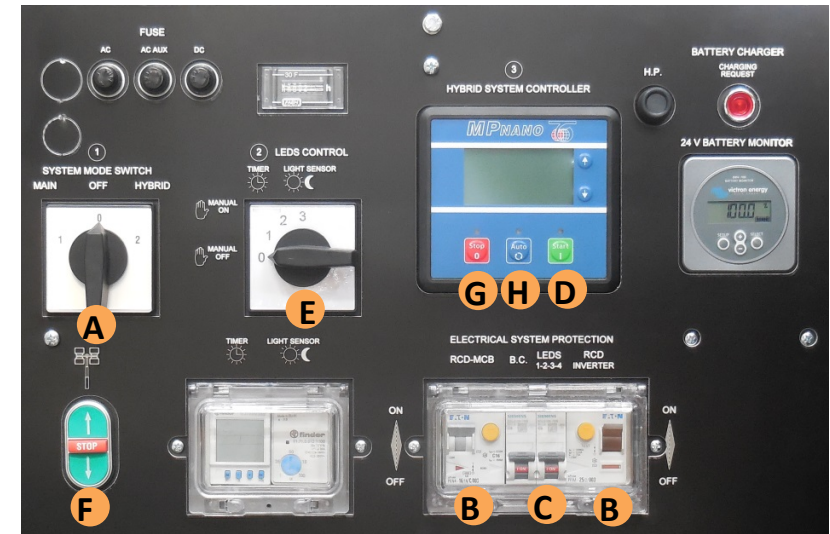

**CONSULT THE MACHINE USER
MANUAL FOR MORE INFORMATION**