

DYNAPAC

Part of the Alfas Copco Group

SCANNED
708

Instruction manual

ICC1200-1EN4.pdf
Operation & Maintenance


Vibratory roller
CC1200

Engine
Kubota D1703

Serial number
10000332X0A000001 -

Machine Type: 0409

Roller 2.5 T Smooth Drum

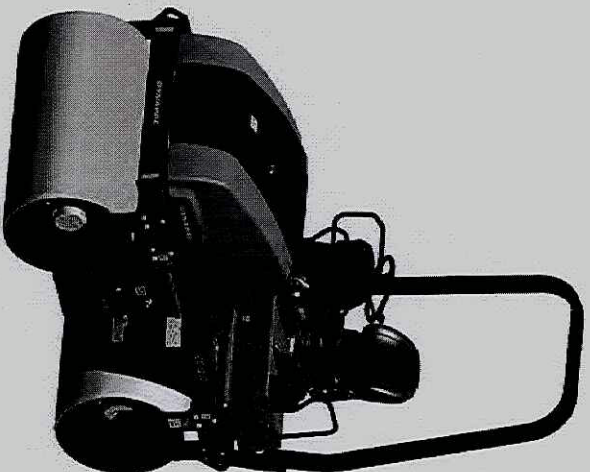

Translation of original instructions

Subject to changes
Printed in Sweden

Table of Contents

Introduction	1
The machine	1
Intended use	1
Warning symbols.....	1
Safety information	1
General	2
CE marking and Declaration of conformity.....	3
Safety - General instructions.....	5
Safety - when operating	7
Driving near edges.....	7
Slopes	8
Special instructions.....	9
Standard lubricants and other recommended oils and fluids	9
Higher ambient temperatures, above +40°C (104°F).....	9
Lower ambient temperature - Freeze risk	9
Temperatures.....	9
High pressure cleaning	9
Fire fighting	10
Roll Over Protective Structure (ROPS).....	10
Battery handling	10
Jump starting.....	11
Technical specifications	13
Vibrations - Operator station	13
Noise level.....	13
Dimensions, top view	14
Dimensions, side view.....	15
Weights and volumes.....	16
Working capacity	16
General	16
Tightening torque	17

ROPS - bolts	18
Hydraulic system	18
Machine description	19
Identification	19
Product identification number on the frame	19
Explanation of 17PIN serial number	19
Machine plate	20
Engine plates	20
Location - decals	22
Safety decals	23
Info decals	24
Instruments/Controls	26
Locations - Instruments and controls	26
Locations - Control panel and controls	27
Function description	28
Electrical system	31
Fuses	31
Operation	33
Before starting	33
Master switch - Switching on	33
Driver seat (Std) - Adjustment	33
Driver seat (Option) - Adjustment	34
Instruments and lamps - Checking	34
Interlock	35
Parking brake - Check	35
Operator position	36
Starting	37
Starting the engine	37
Driving	39
Operating the roller	39

Interlock/Emergency stop/Parking brake - Check	40
Vibration	40
Manual/Automatic vibration	40
Braking	41
Normal braking	41
Emergency braking	42
Switching off	42
Parking	43
Chocking the drums	43
Battery disconnect	43
Long-term parking	45
Engine	45
Battery	45
Air cleaner, exhaust pipe	45
Fuel tank	45
Hydraulic reservoir	45
Water tank	45
Steering cylinder, hinges, etc.	46
Hoods, tarpaulin	46
Miscellaneous	47
Lifting	47
Locking the articulation	47
Lifting the roller	47
Unlocking the articulation	48
Towing/Recovering	49
Release the brakes	49
Releasing the brake. High torque motor (Optional) (p/n 4700380594)	50
Towing the roller	51
Roller prepared for transport	51

Retractable ROPS (Optional)	52
Operating instructions - Summary	53
Preventive maintenance	55
Acceptance and delivery inspection	55
Warranty	55
Maintenance - Lubricants and symbols	57
Maintenance symbols	58
Maintenance - Maintenance schedule	59
Service and maintenance points	59
General	60
Every 10 hours of operation (Daily)	60
After the FIRST 50 hours of operation	60
Every 50 hours of operation (Weekly)	61
Every 250 hours of operation (Monthly)	61
Every 500 hours of operation (Every three months)	61
Every 1000 hours of operation (Every six months)	62
Every 2000 hours of operation (Yearly)	62
Maintenance, 10h	63
Check - Coolant system	63
Hydraulic reservoir, Level check - Filling	64
Lowering of engine hood	65
Air circulation - Check	65
Fuel tank - Filling	66
Sprinkler system/Drum	66
Checking - Cleaning	66
Water tank - Filling	67
Scrapers, fixed	67
Checking - Setting	67
Scrapers, spring-action (Optional)	68
Checking - Adjustment	68
Brakes - Check	68

Maintenance - 50h	71
Air cleaner indicator	71
Air cleaner	
Check - Replacement of main filter	71
Air filter indicator - Resetting	72
Backup filter - Change	72
Air cleaner	
- Cleaning	73
Steering cylinder and steering joint - Lubrication	73
Maintenance - 250h	75
Coolers	
Checking - Cleaning	75
Battery	
- Check condition	76
Engine oil and oil filter - Change	77
Maintenance - 500h	79
Drum - oil level	
Inspection - filling	79
Rubber elements and attachment screws	
Check	80
Hydraulic reservoir cap - Check	80
Controls - Lubrication	80
Check - Coolant system	81
Maintenance - 1000h	83
Replacing the hydraulic oil filter	83
Hydraulic fluid reservoir - Draining	85
Replacing the fuel filter	85
Replacing the pre-filter	86
Maintenance - 2000h	87
Hydraulic tank - Changing the fluid	87
Drum - Oil change	88
Water tank - Draining	88

Water pump - Draining	89
Water tank - Cleaning	89
Fuel tank - Cleaning	90
Steering joint - Check	90

Introduction

The machine

Dynapac CC1200 is a self-propelled vibratory tandem roller in the 2 metric tonnes class featuring 1200 mm wide drums. The machine is equipped with drive, brakes, and vibration on both drums.

Intended use

CC1200 has primarily been designed for the compaction of asphalt, but has excellent compaction capacity for reinforcement layers and bearing courses. The roller is mainly intended for compacting asphalt on streets and minor roads in towns. It has sufficient capacity to follow a small asphalt paver.

Warning symbols



WARNING ! Marks a danger or a hazardous procedure that can result in life threatening or serious injury if the warning is ignored.



CAUTION ! Marks a danger or hazardous procedure that can result in damage to the machine or property if the warning is ignored.

Safety information



It is recommended to at least train operators in handling and daily maintenance of the machine in accordance with the instruction manual. Passengers are not allowed on the machine, and you must sit in the seat when operating the machine.



The safety manual supplied with the machine must be read by all roller operators. Always follow the safety instructions. Do not remove the manual from the machine.



We recommend that the operator reads the safety instructions in this manual carefully. Always follow the safety instructions. Ensure that this manual is always easily accessible.

Introduction



Read the entire manual before starting the machine and before carrying out any maintenance.



Replace immediately the instruction manuals if lost, damaged or unreadable.



Ensure good ventilation (extraction of air by fan) where the engine is run indoors.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

General

This manual contains instructions for machine operation and maintenance.

The machine must be correctly maintained for maximal performance.

The machine should be kept clean so that any leakages, loose bolts and loose connections are discovered at as early a point in time as possible.

Do not spray with high-pressure cleaner directly onto gaskets and bearing spacings in steering hitch and drum.

Inspect the machine every day, before starting.

Inspect the entire machine so that any leakages or other faults are detected.

Check the ground under the machine. Leakages are more easily detected on the ground than on the machine itself.



THINK ENVIRONMENT ! Do not release oil, fuel and other environmentally hazardous substances into the environment. Always send used filters, drain oil and fuel remnants to environmentally correct disposal.

This manual contains instructions for periodic maintenance normally carried out by the operator.



Additional instructions for the engine can be found in the manufacturer's engine manual.

CE marking and Declaration of conformity

(Applies to machines marketed in EU/EEC)

This machine is CE marked. This shows that on delivery it complies with the basic health and safety directives applicable for the machine in accordance with machinery directive 2006/42/EC and that it also complies with other directives applicable for this machine.

A "Declaration of conformity" is supplied with this machine, which specifies the applicable directives and supplements, as well as the harmonized standards and other regulations that are applied.

Safety - General instructions

(Also read the safety manual)



1. The operator must be familiar with the contents of the OPERATION section before starting the roller.
2. Ensure that all instructions in the MAINTENANCE section are followed.
3. Only trained and/or experienced operators are to operate the roller. Passengers are not permitted on the roller. Remain seated at all times when operating the roller.
4. Never use the roller if it is in need of adjustment or repair.
5. Only mount and dismount the roller when it is stationary. Use the intended grips and rails. Always use the three-point grip (both feet and one hand, or one foot and both hands) when mounting or dismounting the machine. Never jump down from the machine.
6. The ROPS (Roll Over Protective Structure) should always be used when the machine is operated on unsafe ground.
7. Drive slowly in sharp bends.
8. Avoid driving across slopes. Drive straight up or straight down the slope.
9. When driving close to edges, ditches or holes, make sure that at least 2/3 of the drum width is on previously compacted material (solid surface).
10. Make sure that there are no obstacles in the direction of travel, on the ground, in front of or behind the roller, or overhead.
11. Drive particularly carefully on uneven ground.
12. Use the safety equipment provided. The seat belt must be worn on machines fitted with ROPS/ROPS-cab.
13. Keep the roller clean. Clean any dirt or grease that accumulates on the operator platform immediately. Keep all signs and decals clean and legible.
14. Safety measures before refueling:
 - Stop the engine
 - Do not smoke.
 - No naked flames in the vicinity of the roller.
 - Earth the filling equipment nozzle to the tank opening to avoid sparks.
15. Before repairs or service:
 - Chock the drums/wheels and under the strike-off blade.
 - Lock the articulation if necessary

16. Hearing protection is recommended if the noise level exceeds 85 dB(A). The noise level can vary depending on the equipment on the machine and the surface the machine is being used on.
17. Do not make any changes or modifications to the roller that could affect safety. Changes are only to be made after written approval has been given by Dynapac.
18. Avoid using the roller before the hydraulic fluid has reached its normal working temperature. Braking distances can be longer than normal when the fluid is cold. See instructions in the STOP section.
19. For your own protection always wear:
 - helmet
 - working boots with steel toecaps
 - ear protectors
 - reflecting clothing/high visibility jacket
 - working gloves

Safety - when operating

- ⚠ *Prevent persons from entering or remaining in the danger area, i.e. a distance of at least 7 m (23 ft) in all directions from operating machines. The operator may allow a person to remain in the danger area, but should then observe caution and operate the machine only when the person is visible or has given clear indications of where he or she is.*

Driving near edges

When driving near an edge, minimum 2/3 of the drum width must be on solid ground.

- ⚠ *Keep in mind that the machine's center of gravity moves outwards when steering. For example, the center of gravity moves to the right when you steer to the left.*

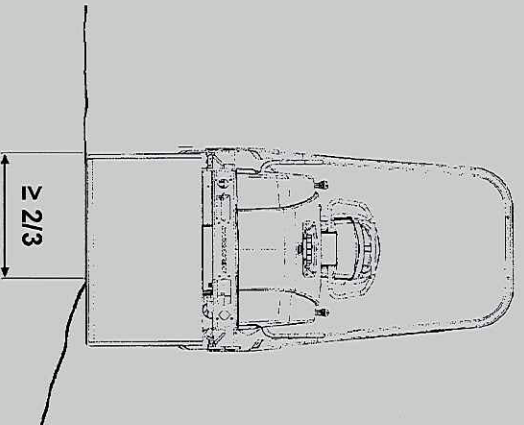


Fig. Position of drum when driving near an edge

- ⚠ *Where possible, avoid driving across slopes. Drive instead straight up and down sloping ground.*

Slopes

This angle has been measured on a hard, flat surface with the machine stationary.

The steering angle was zero, the vibration was switched OFF and all tanks were full.

Always take into consideration that loose ground, steering the machine, vibration on, machine speed across the ground and raising the center of gravity can all cause the machine to topple at smaller slope angles than those specified here.



It is recommended that ROPS (Roll Over Protective Structure) or a ROPS approved cab, is always used when driving on slopes or unsafe ground.

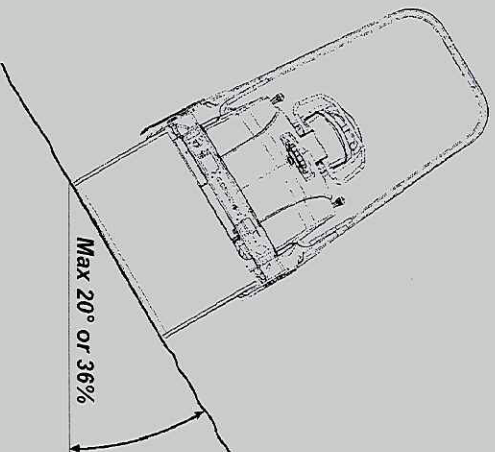


Fig. Operating on slopes

Special instructions

Standard lubricants and other recommended oils and fluids

Before leaving the factory, the systems and components are filled with the oils and fluids specified in the lubricant specification. These are suitable for ambient temperatures in the range -15°C to +40°C (5°F - 105°F).



The maximum temperature for biological hydraulic fluid is +35°C (95°F).

Higher ambient temperatures, above +40°C (104°F)

For operation of the machine at higher ambient temperatures, however maximum +50°C (122°F), the following recommendations apply:

The diesel engine can be run at this temperature using normal oil. However, the following fluids must be used for other components:

Hydraulic system - mineral oil Shell Tellus T100 or similar.

Lower ambient temperature - Freeze risk

Make sure that the watering system is empty/drainned of water (sprinkler, hoses, tank/s) or that anti-freeze has been added, to prevent the system freezing.

Temperatures

The temperature limits apply to standard versions of rollers.

Rollers equipped with additional equipment, such as noise suppression, may need to be more carefully monitored in the higher temperature ranges.

High pressure cleaning

Do not spray water directly onto electrical components or the instrument panels.

Place a plastic bag over the fuel filler cap and secure with a rubber band. This is to avoid high pressure water entering the vent hole in the filler cap. This could cause malfunctions, such as the blocking of filters.

Do not spray with high-pressure cleaner directly onto gaskets and bearing spacings in steering hitch and drum.

Special instructions



Never aim the water jet directly at the fuel tank cap. This is particularly important when using a high-pressure cleaner.

Fire fighting

If the machine catches fire, use an ABC-class powder fire extinguisher.

A BE-class carbon dioxide fire extinguisher can also be used.

Roll Over Protective Structure (ROPS)



If the machine is fitted with a Roll Over Protective Structure (ROPS) never carry out any welding or drilling in the structure or cab.



Never attempt to repair a damaged ROPS structure or cab. These must be replaced with new ROPS structure or cabs.

Battery handling



When removing batteries, always disconnect the negative cable first.



When fitting batteries, always connect the positive cable first.




Dispose of old batteries in an environmentally friendly way. Batteries contain toxic lead.



Do not use a quick-charger for charging the battery. This may shorten battery life.

Jump starting

 **Do not connect the negative cable to the negative terminal on the dead battery. A spark can ignite the oxy-hydrogen gas formed around the battery.**

 **Check that the battery used for jump starting has the same voltage as the dead battery.**

Turn the ignition and all power consuming equipment off. Switch off the engine on the machine which is providing jump start power.

First connect the jump start battery's positive terminal (1) to the flat battery's positive terminal (2). Then connect the jump start battery's negative terminal (3) to, for example, a bolt (4) or the lifting eye on the machine with the flat battery.

Start the engine on the power providing machine. Let it run for a while. Now try to start the other machine. Disconnect the cables in the reverse order.

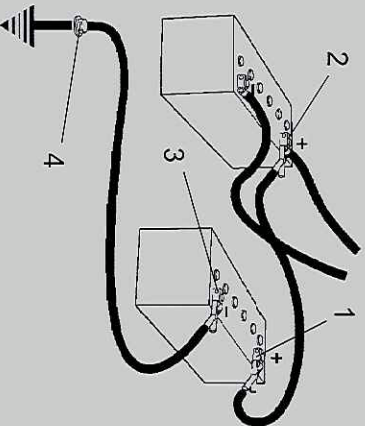


Fig. Jump starting

Technical specifications

Technical specifications

Vibrations - Operator station (ISO 2631)

The vibration levels are measured in accordance with the operational cycle described in EU directive 2000/14/EC on machines equipped for the EU market, with vibration switched on, on soft polymer material and with the operator's seat in the transport position.

Measured whole-body vibrations are below the action value of 0.5 m/s² as specified in Directive 2002/44/EC. (Limit is 1.15 m/s²)

Measured hand/arm vibrations also were below the action level of 2.5 m/s² specified in the same directive. (Limit is 5 m/s²)


Noise level

The noise level is measured in accordance with the operational cycle described in EU directive 2000/14/EC on machines equipped for the EU market, with the vibration switched on, on soft polymer material and with the operator's seat in the transport position.

Guaranteed sound power level, L_{wA}	104	dB (A)
Sound pressure level at the operator's ear (platform), L_{pA}	85 ±3	dB (A)


During operation the above values may differ because of the actual operational conditions.

Dimensions, top view

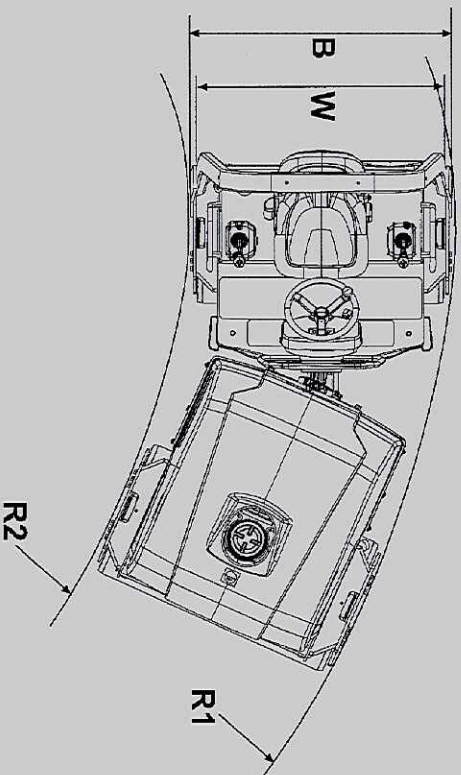

Dimensions	mm	in
B	1310	52
B (without ROPS)	1280	50
R ₁	3800	150
R ₂	2600	102
W	1200	47

Dimensions, side view

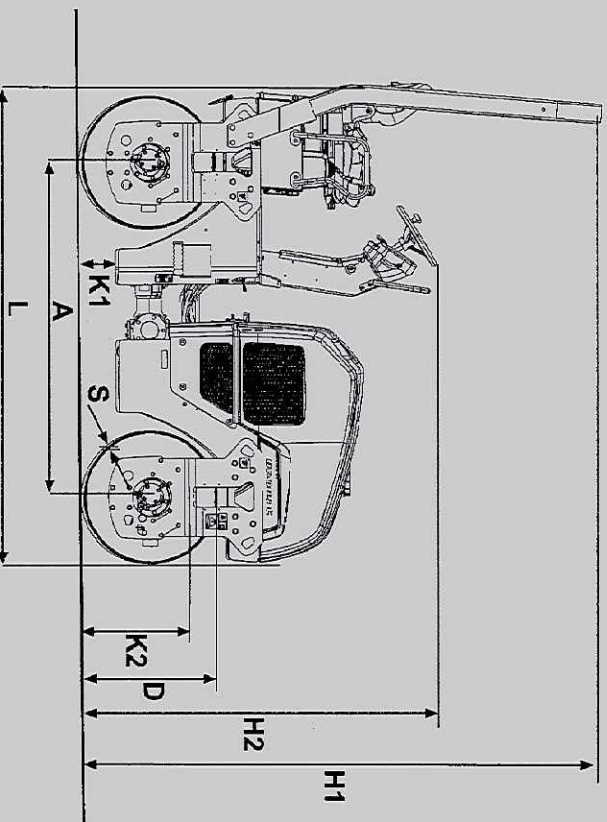

Dimensions	mm	in
A	1715	68
D	682	27
H ₁	2640	104
H ₂	1810	71
K ₁	175	7
K ₂	550	22
L	2395	94
S	13	0.5

Weights and volumes

Weights

Weight CECE, Standard equipped roller	2450 kg	5,400 lbs
---------------------------------------	---------	-----------

Fluid volumes

Fuel tank	50 liters	52.9 qts
Water tank	200 liters	211.4 qts

Working capacity

Compaction data

Static linear load	10,5 kg/cm	58.8 pli
Amplitude	0,5 mm	0.019 in
Vibration frequency	58 Hz	3,480 vpm
Centrifugal force	27 kN	6,075 lb

Note: The frequency is measured at high revs. The amplitude is measured as the real value and not the nominal.

Propulsion

Speed range	0-10	km/h	0-6.2	mph
Climbing capacity (theoretical)	45	%		

General

Engine

Manufacturer/Model	Kubota D1703	
Power (SAE J1995)	26.1 kW	35 hp
Engine speed	2800*/2400 rpm	

*) in US only.

Electrical system

Battery	12V 74Ah
Alternator	12V 60A
Fuses	See the Electrical system section - fuses

Tightening torque

Tightening torque in Nm (lbf.ft) for oiled or dry bolts tightened with a torque wrench.

Metric coarse screw thread, bright galvanized (fzb):

STRENGTH CLASS:

M - thread	8.8, Oiled	8.8, Dry	10.9, Oiled	10.9, Dry	12.9, Oiled	12.9, Dry
M6	8,4	9,4	12	13,4	14,6	16,3
M8	21	23	28	32	34	38
M10	40	45	56	62	68	76
M12	70	78	98	110	117	131
M14	110	123	156	174	187	208
M16	169	190	240	270	290	320
M20	330	370	470	520	560	620
M22	446	497	626	699	752	839
M24	570	640	800	900	960	1080
M30	1130	1260	1580	1770	1900	2100

Metric coarse thread, zinc-treated (Dacromet/GEOMET):

STRENGTH CLASS:

M - thread	10.9, Oiled	10.9, Dry	12.9, Oiled	12.9, Dry
M6	12,0	15,0	14,6	18,3
M8	28	36	34	43
M10	56	70	68	86
M12	98	124	117	147
M14	156	196	187	234
M16	240	304	290	360
M20	470	585	560	698
M22	626	786	752	944
M24	800	1010	960	1215
M30	1580	1990	1900	2360

Technical specifications



ROPS-bolts which are to be torque tightened must be dry.

ROPS - bolts

Bolt dimensions :	M16 (PN 902889)
Strength class :	10.9
Tightening torque :	192 Nm, torque class 2 (Dacromet treated)

Hydraulic system

Opening pressure	MPa
Drive system	35,0
Supply system	2,5
Vibration system	20,0
Control systems	17,0
Brake release	1,5

Machine description

Machine description

Identification

Product identification number on the frame

The machine PIN (product identification number) (1) is punched on the right edge of the front frame.

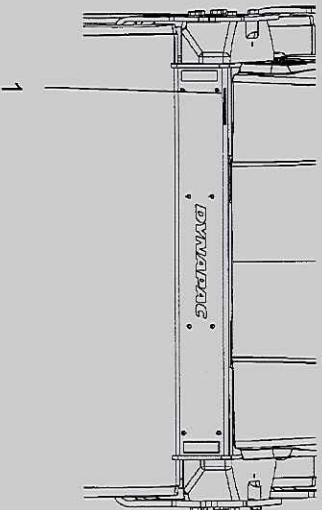


Fig. PIN Front frame
1. Serial number

100	00123	V	0	A	123456
A	B	C	D	E	F

Explanation of 17PIN serial number

- A= Manufacturer
- B= Family/Model
- C= Check letter
- D= No coding
- E= Production unit
- F= Serial number

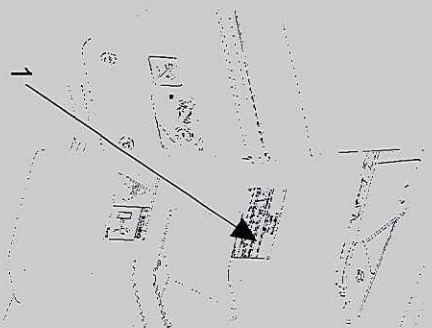
Machine description

Fig. Operator platform
1. Machine plate

Machine plate

The machine type plate (1) is affixed on the left front edge of the operator's platform.

The plate specifies the manufacturer's name and address, the type of machine, the PIN number (serial number), service weight, engine power and year of manufacture. If the machine is delivered outside of the EU, the plate may not have a CE marking and the year of manufacture.

DYNAPAC (CE)					
Dynapac Compaction Equipment AS Box 804, 856-371 23 Korkfjärren, Sweden					
Product Identification Number					
Designation	Type	Rated Power kW	Max. axle load front / rear kg	Year of Mfg. NA	
Gross machine's mass kg	Operating mass kg	Max. ballast kg	Year of Mfg. NA	Made in Sweden #111501 M. 0	

Please state the machine's PIN (serial number) when ordering parts.

Engine plates

The engine's type plate (1) is located on top of the cylinder head cover.

The plate specifies the type of engine, its serial number and the engine specification.

Please specify the engine serial number when ordering spares. Refer also to the engine manual.


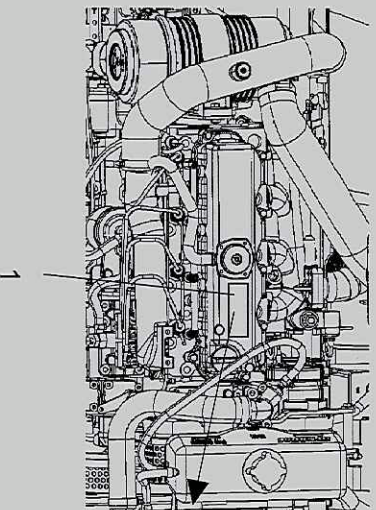


Fig. Engine
1. Type plate

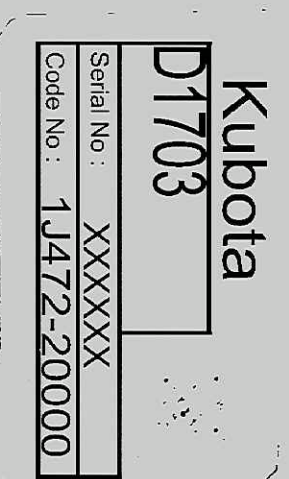

TYPE	: D1703-M-EU32
FAMILY	: YKBXL02.2FCD
APPROVAL NUMBER:	e1#97/680A*2004/26XA#0072409
Kubota KUBOTA Corporation	
TH266-1	

Machine description

EMISSION CONTROL INFORMATION 	
THIS ENGINE MEETS 2008 Int. Tier4 EMISSION REGULATIONS FOR U.S. EPA AND CALIFORNIA NONROAD CI ENGINES.	
Kubota KUBOTA Corporation	
MODEL : D1703-H-ET01	ENGINE DISP. : 1.7L
FAMILY : 8KBYL02-2FCU	EQS: EM
POWER : 26.1kW/2800rpm	CATEROR: 9-37M
VALVE CLEARANCE(GOLD) : IN 0.20mm EX 0.20mm	
INJ. TIMING : 17.25 DEG BTDC	
LOW SULFUR DIESEL OR QUALITY SUPER DIESEL FUEL ONLY	
CONTACT KUBOTA FOR FUEL SETTING.	1TR239-2

Location - decals



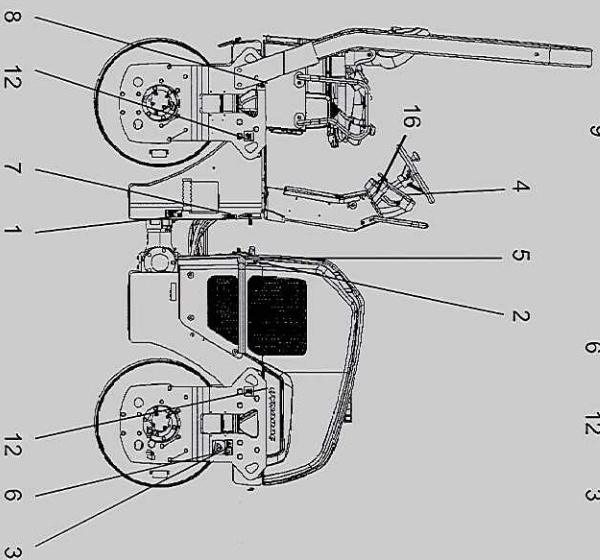


Fig. Location, decals and signs

1.	Warning, Crush zone	4700903422	8.	Lifting point	4700357587
2.	Warning, Rotating engine components	4700903423	9.	Hydraulic fluid	4700272372
3.	Warning, Locking	4700908229	10.	Manual compartment	4700903425
4.	Warning, Instruction manual	4700903459	11.	Battery disconnect	4700904835
5.	Warning, Hot surfaces	4700903424	12.	Fixing point	4700382751
6.	Lifting plate	4700904870	13.	Sound power level	4700791292
7.	Diesel fuel	4700991658	14.	Hydraulic fluid level	4700272373
			15.	Warning, Starting gas	4700791642
			16.	Starting instructions	4812115918

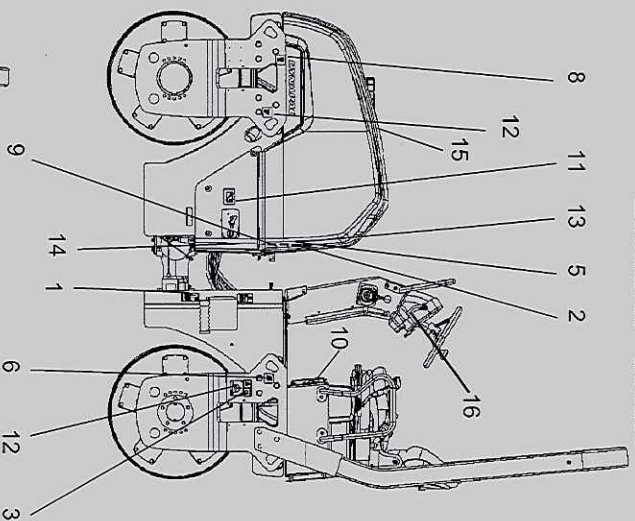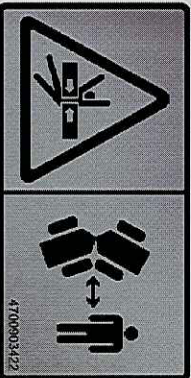

Safety decals


Always make sure that all safety decals are completely legible, and remove dirt or order new decals if they have become illegible. Use the part number specified on each decal.

4700903422

Warning - Crush zone, articulation/drum.

Maintain a safe distance from the crush zone.


(Two crush zones on machines fitted with pivotal steering)

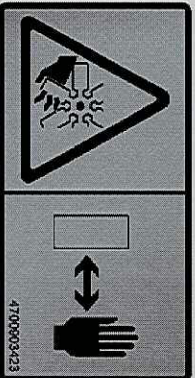

4700903423

Warning - Rotating engine components.


Keep your hands at a safe distance from the danger zone.

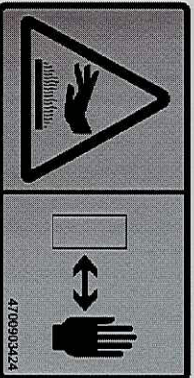

4700903424

Warning - Hot surfaces in the engine compartment.


Keep your hands at a safe distance from the danger zone.

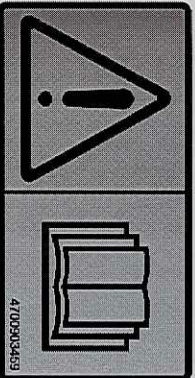

4700903459

Warning - Instruction manual

The operator must read the safety, operation and maintenance instructions before operating the machine.

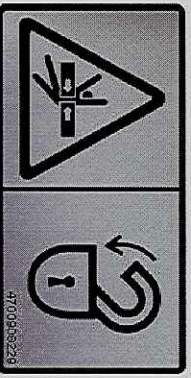


4700908229

Warning - Risk of crushing


The articulation must be locked when lifting.

Read the instruction manual.

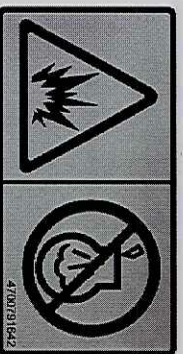

4700791642
Warning - Starting gas
Starting gas is not to be used.


Info decals

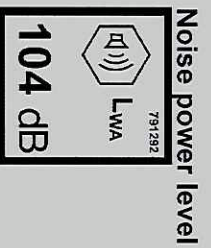


Diesel fuel



Lifting point

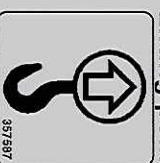


Handbook compartment

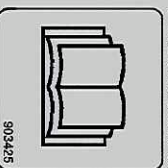



Master switch




Hydraulic fluid level

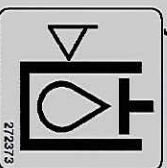


Securing point

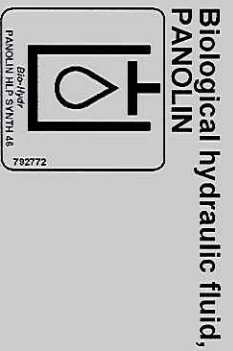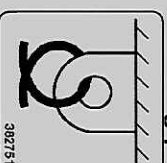

Water

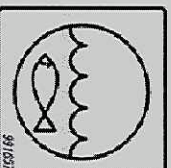

Starting instructions

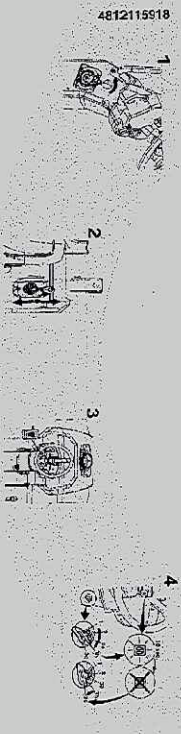

Instruments/Controls

Locations - Instruments and controls

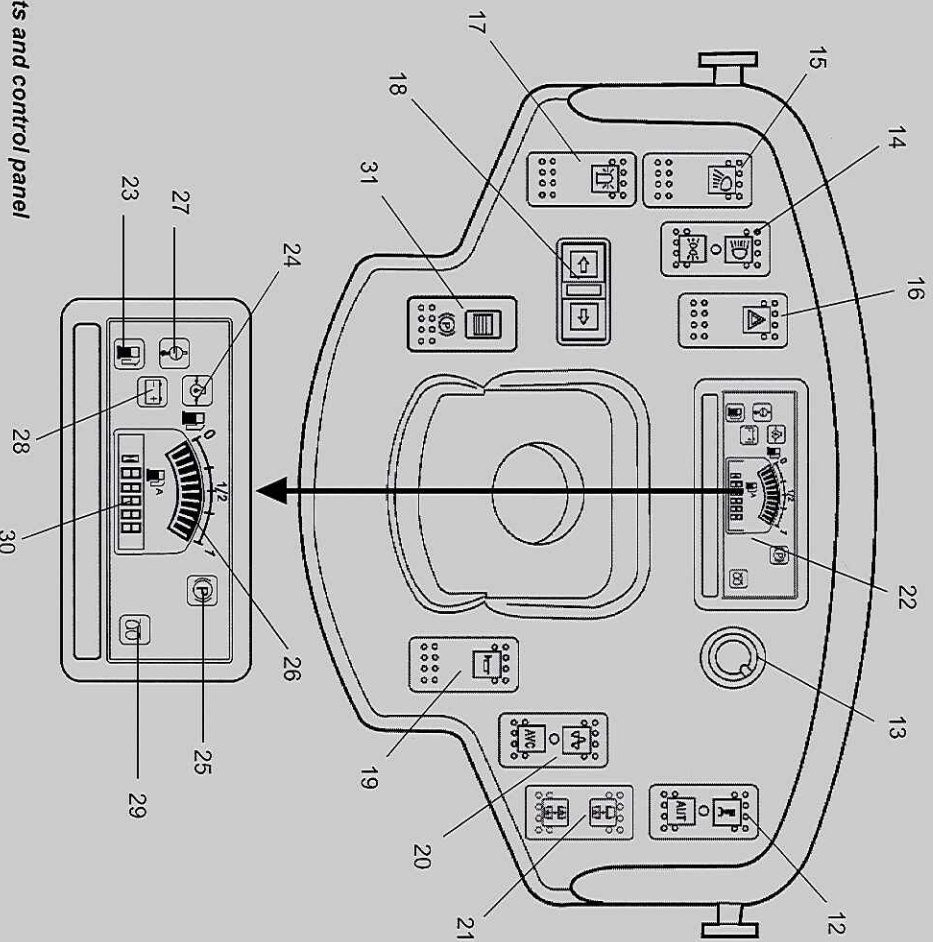


Fig. Instruments and control panel

- | | | | |
|-----|------------------------------------|-----|---------------------------|
| 12. | Manual/automatic sprinkler | 23. | Low fuel level |
| 13. | * Sprinkler timer | 24. | Oil pressure, engine |
| 14. | * Driving lights | 25. | Parking brake lamp |
| 15. | * Working lights | 26. | Fuel level |
| 16. | * Hazard warning lights | 27. | Water temperature, engine |
| 17. | * Hazard beacon | 28. | Battery/charging |
| 18. | * Direction indicators | 29. | Glow plug |
| 19. | Horn | 30. | Hourmeter |
| 20. | Vibration manual/automatic | 31. | Parking brake On/Off |
| 21. | Vibration selector Front/rear drum | | |
| 22. | Control panel | | |

* = Option

Locations - Control panel and controls

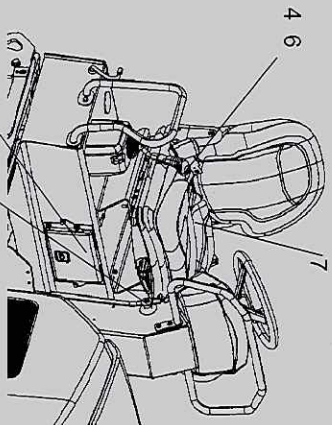


Fig. Operator position







 


 


 
 
 
 
 

 
 

Fig. Operator's station

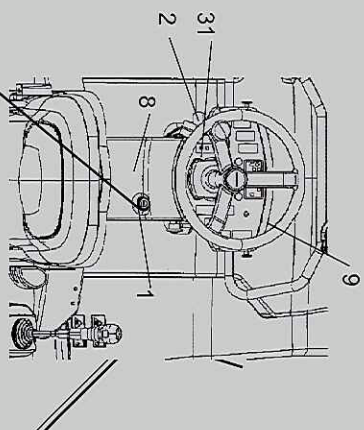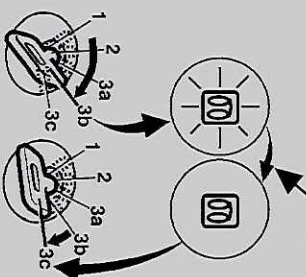








- 1 Starter switch
- 2 Throttle control
- 3 Emergency stop
- 4 Vibration On/Off
- 5 Handbook compartment
- 6 Forward/reverse lever
- 7 Seat switch
- 8 Fuse box
- 9 Instrument cover

Function description

No	Designation	Symbol	Function
1.	Starter switch		<p>Positions 1-2: Shut off position, key can be removed.</p> <p>Position 3a: All instruments and electric controls are supplied with power.</p> <p>Position 3b: Glowing. Hold the starter switch in this position until the lamp goes out. The starter motor is activated in the next position.</p> <p>Position 3c: Starter motor activation.</p>
2.	Throttle control		<p>In forward position, the engine idles. In backward position, the engine runs at full speed.</p>
3.	Emergency stop		<p>When pressed, the emergency stop is activated. The engine switches off and the brakes are activated. Brace yourself for a sudden stop.</p>
4.	Vibration On/Off. Switch		<p>Press once and release to switch vibration on. Press again to switch the vibration off.</p>
5.	Handbook compartment		<p>Pull up and open the top of the compartment for access to handbooks.</p>
6.	Forward/Reverse lever		<p>The engine can only be started when the lever is in neutral. The engine will not start if the forward/reverse lever is not in the neutral position. Direction of travel and speed of the roller is regulated with the forward/reverse lever. Move the lever forward to drive the roller forwards, etc. The speed of the roller is proportional to the distance of the lever from the neutral position. The further the lever is from the neutral position, the higher the speed.</p>
7.	Seat switch		<p>Remain seated at all times when operating the roller. If the operator stands up during operation, a buzzer sounds. After 4 seconds the brakes are activated and the engine stops.</p>
8.	Fuse box (on control column)		<p>Contains fuses for the electrical system. See under the heading 'Electrical system' for a description of fuse functions.</p>
9.	Instrument cover		<p>Lowered over the instrument plate to protect the instruments from the weather and sabotage. Lockable</p>
12.	Sprinkler, switch (Option)		<p>Upper position = switching on of flow of water to drum. Intermediate position = Sprinkling switched off Lower position = switching on of water to drum via forward/reverse lever. The flow of water can be controlled by means of the sprinkler timer (13).</p>

No	Designation	Symbol	Function
13.	Sprinkler timer (Optional)		Variable adjustment of water flow from 0-100%. Only works when AUTO (12) is pressed in.
14.	Driving lights, switch (Optional)		Upper position = Traffic lighting goes on Intermediate position = Lighting switched off Lower position = Parking light goes on
15.	Working lights, switch (Optional)		When depressed, the working lights are on
16.	Hazard warning lights, switch (Optional)		Where depressed, the hazard warning lights are on
17.	Hazard beacon, switch		Where depressed, the hazard beacon is on
18.	Direction indicators, switch (Optional)		When depressed to the left, the left direction indicators are on etc. In the middle position the function is shut off.
19.	Horn, switch		Press to sound the horn.
20.	Vibration MAN/AUTO, switch		In the upper position, the vibration is switched on/off with the switch on the forward/reverse lever. The function is activated with the switch. In the intermediate position the vibration system is completely switched off.
21.	Vibration selector, switch		Upper position = Vibration switch off on front drum Lower position = Vibration on both drums.
22.	Control panel		
23.	Warning lamp, low fuel level		The lamp comes on when the fuel level in the tank is low.

 Machine description

No	Designation	Symbol	Function
24.	Warning lamp, oil pressure		This lamp lights if the lubricating pressure in the engine is too low. Stop the engine immediately and locate the fault.
25.	Warning lamp, parking brake		The lamp lights when the parking brake is activated.
26.	Fuel level		Shows the fuel level in the diesel tank.
27.	Warning lamp, water temperature		The light comes on if the water temperature is too high.
28.	Warning lamp, battery charging		If the lamp lights while the engine is running the alternator is not charging. Stop the engine and locate the fault.
29.	Warning lamp, glow plug		The lamp must go out before the starter switch is moved to position 3c for activation of the starter motor.
30.	Hourmeter		Shows the number of hours the engine has run.
31.	Parking brake On/Off, switch		Push in to activate the parking brake, the machine stops with the engine running. Always use the parking brake when the machine is stationary on a sloping surface.

Electrical system

Fuses

The figure shows the position of the fuses.

The table below gives fuse amperage and function. All fuses are flat pin fuses.

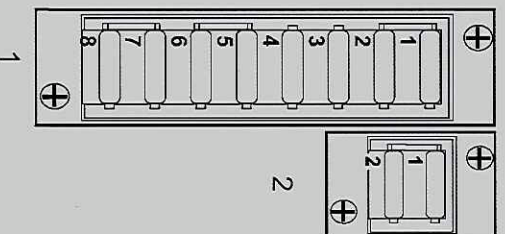


Fig. Fuse boxes
1. Upper
2. Lower

Fuse box, Upper

1.	ECU, Interlock, Instrument panel, Sprinkler front, Vibration	10A	1.	Reserve	
2.	Alternator, Horn, Fuel pump	10A	2.	Flow divider	10A
3.	Indicators left	5A			
4.	Indicators right	5A			
5.	Hazard beacon	10A			
6.	Indicator relay, Power socket 12V	10A			
7.	Position lights, Working lights front	15A			
8.	Traffic lights, Working lights rear	15A			

Fuse box, Lower

1.	ECU, Interlock, Instrument panel, Sprinkler front, Vibration	10A	1.	Reserve	
2.	Alternator, Horn, Fuel pump	10A	2.	Flow divider	10A
3.	Indicators left	5A			
4.	Indicators right	5A			
5.	Hazard beacon	10A			
6.	Indicator relay, Power socket 12V	10A			
7.	Position lights, Working lights front	15A			
8.	Traffic lights, Working lights rear	15A			

Operation

Before starting

Master switch - Switching on

Remember to carry out daily maintenance. See the maintenance instructions.

The battery disconnecter is on the left side in the engine compartment.
Turn the key (1) to switched on position. The roller is now supplied with power.

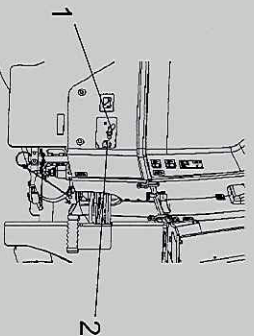


Fig. Engine compartment
1. Battery disconnecter
2. Power socket, 12 V

! *The engine hood must be unlocked during operation, unless the battery disconnecter is freely accessible from the outside, so that the battery voltage can be quickly disconnected if necessary.*

Driver seat (Std) - Adjustment

Adjust the operator's seat so that the position is comfortable and so that the controls are within easy reach.

The seat can be adjusted as follows.

- Length adjustment (1)
- Backrest adjustment (2)
- Weight adjustment (3)

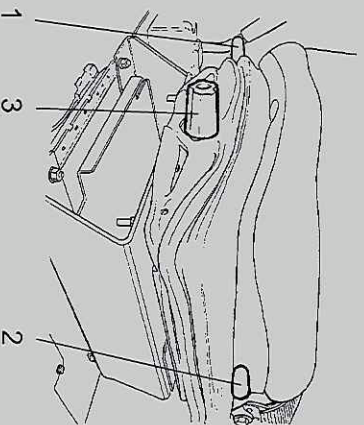
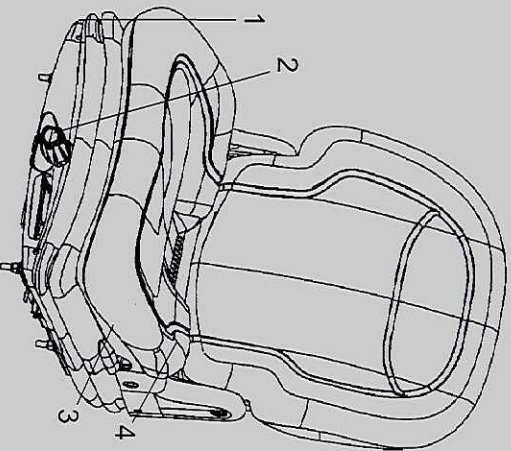


Fig. Driver seat
1. Handle - Length adjustment
2. Handle - Backrest angle
3. Handle - Weight adjustment

! *Always check that the seat is in locked position before starting.*

**Fig. Driver seat**

1. Lock lever - Length adjustment
2. Weight adjustment
3. Back support angle
4. Seat belt

Driver seat (Option) - Adjustment

Adjust the operator's seat so that the position is comfortable and so that the controls are within easy reach.

The seat can be adjusted as follows.

- Length adjustment (1)
- Weight adjustment (2)
- Back support angle (3)

! *Always make sure that the seat is secure before beginning operation.*

! *Do not forget to use the seat belt (4).*


Instruments and lamps - Checking

! *Make sure that the emergency stop button is pulled out and the parking brake is activated. When the forward/reverse lever is in neutral, the automatic brake function is engaged.*

Turn the switch (1) to position 3a.

Check that the warning lamps in the warning panel (22) come on.

Set the sprinkler switch (12) to the operating position and check that the system is functioning.

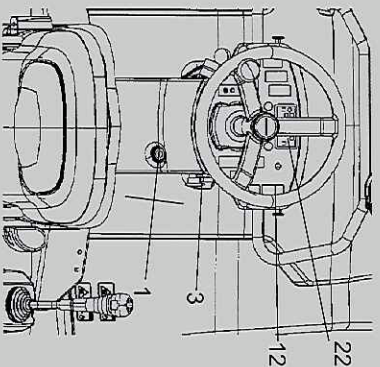**Figure. Instrument panel**

1. Starter switch
3. Emergency stop
12. Switch, watering
22. Warning panel

Interlock

The roller is equipped with Interlock.

The diesel engine will switch off after 4 seconds if the operator gets off the seat when going forwards/backwards.

If the control is in neutral when the operator stands up a buzzer will go on until the parking brake button is activated.

The engine does not stop if the parking brake is activated.

The diesel engine will switch off immediately if for any reason the forward/reverse lever is moved out of neutral when the operator is not sitting down and the parking brake button has not been activated.



Sit down for all operations!

Parking brake - Check



Make sure that the parking brake (6) is activated. The roller can start to roll when the engine is started on sloping ground, if the parking brake is not applied.

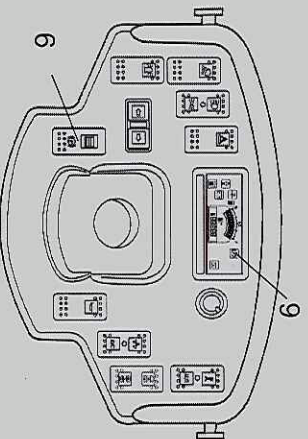


Fig. Instrument panel
6. Parking brake
9. Brake warning lamp

Operator position

If an ROPS (Roll Over Protective Structure) is fitted to the roller, always wear the seat belt (1) and wear a protective helmet.



Always replace the seat belt (1) if it shows signs of wear or has been subjected to excessive strain.



Fig. Driver seat

1. Seat belt
2. Safety rails
3. Rubber element
4. Anti-slip



Check that the platform's rubber elements (3) are in good condition. If the elements are worn this will have a negative effect on comfort.



Ensure that the anti-slip (4) on the platform is in good condition. Replace where anti-slip friction is poor.

Starting

Starting the engine



The operator must remain seated when starting.

Make sure that the emergency stop button (3) is pulled out and the parking brake (31) is activated.

Set the forward/reverse lever (6) in neutral. The engine can only be started when the lever is in neutral.

Set the vibration switch (20) for manual/automatic vibration in (position O).

! Do not run the starter motor for too long. If the engine does not start, wait a minute or so before trying again.

At high ambient temperatures, set the throttle control (2) to the position just over idling.

Set the throttle control (2) to full speed when starting a cold engine. Preheating: Turn key to position II. When the glow lamp (29) goes off: Turn the starter switch (1) to the right. As soon as the engine starts, release the starter switch and reduce the engine speed to just over idling (because high revs can damage a cold engine). As soon as the engine is running smoothly, reduce the revs down to idling.

Warm up the engine at idling speed for a few minutes, although longer if ambient temperature is below +10°C (50°F).

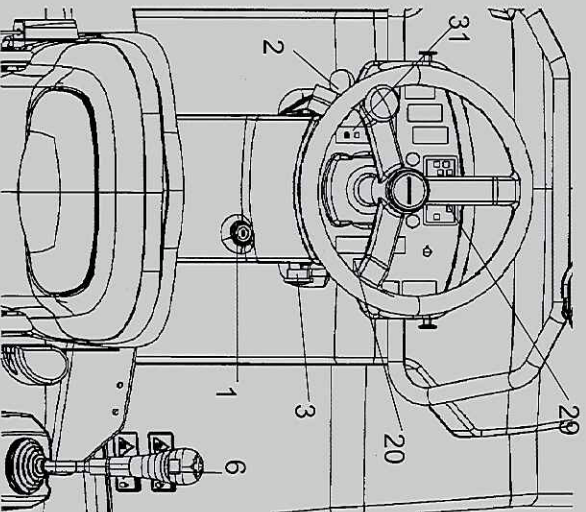


Figure. Control panel

- 1. Starter switch
- 2. Throttle control
- 3. Emergency stop
- 6. Forward/Reverse lever
- 20. Vibration switch manual/auto
- 29. Glow lamp
- 31. Parking brake

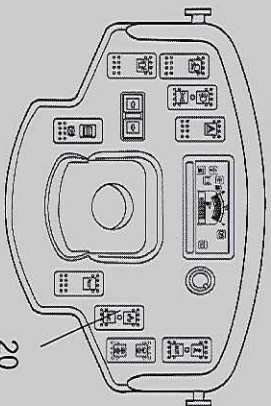


Fig. Instrument panel
20. Vibration switch

Check while warming the engine that the warning lamps for the oil pressure (24) and charging (28) go out.

The parking brake lamp (25) will remain on for as long as the parking brake switch is activated.

! *When starting and driving a machine that is cold, remember that the hydraulic fluid is also cold and that braking distances can be longer than normal until the machine reaches the working temperature.*

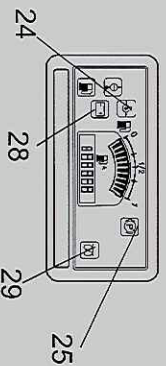


Fig. Control panel
24. Oil pressure lamp
25. Brake lamp
28. Charging lamp
29. Glow lamp

! *Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.*

Driving

Operating the roller



Under no circumstances is the machine to be operated from the ground. The operator must be seated inside the machine during all operation.



Make sure that the area in front of and behind the roller is clear.

Release the parking brake and check that the parking brake lamp goes off.

Turn the throttle control (2) in backward position.

Check that the steering is working correctly by turning the steering wheel once to the right and once to the left while the roller is stationary.

When compacting asphalt, remember to turn on the sprinkler system (12).

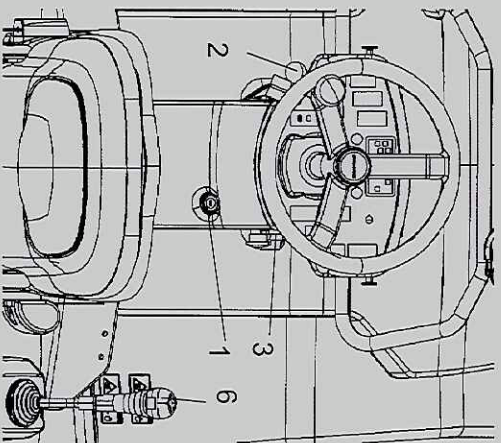


Figure. Instrument panel

1. Starter switch
2. Throttle control
3. Emergency stop
6. Forward/reverse lever

Interlock/Emergency stop/Parking brake - Check

! The interlock, emergency stop and parking brake must be checked daily before operating. A function check of the interlock and emergency stop requires a restart.

! The interlock function is checked by the operator standing up from the seat when the roller is moving very slowly forwards/backwards. (Check in both directions). Hold the steering wheel firmly and brace yourself for a sudden stop. A buzzer goes on and after 4 seconds the engine switches off and the brakes are activated.

! Check the function of the emergency stop by pressing the emergency stop button when the roller is moving slowly forwards/backwards. (Check in both directions). Hold the steering wheel firmly and brace yourself for a sudden stop. The engine switches off and the brakes are activated.

! Check the function of the parking brake by activating the parking brake when the roller is moving very slowly forwards/backwards. (Check in both directions). Hold the steering wheel and brace yourself for a sudden stop when the brakes are activated. The engine does not switch off.

Vibration

Manual/Automatic vibration

Manual or automatic vibration activation/deactivation is selected using switch (20).

In the manual position, the operator must activate the vibration using the switch on underside of the forward/reverse lever grip.

In the automatic position, vibration is activated when the pre-set speed is reached. Vibration is automatically deactivated when the lowest pre-set speed is reached.

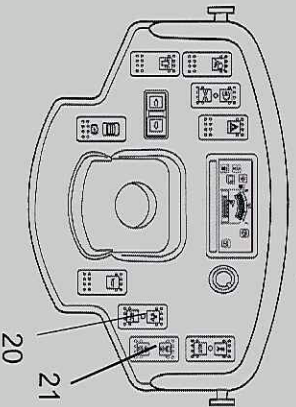


Fig. Instrument panel
20. Man/Auto switch
21. Switch, Vibration selector

Vibration on one drum (Optional)

The switch (21) is used to select vibration with the rear drum only, or with two drums.

When the vibration is on, the operator must activate vibration via the switch (20) on the forward/reverse lever.

In the lower position the vibration is activated on both drums.

In the upper position the vibration on the front drum is switched off.

Braking

Normal braking

Press the switch (4) to switch off the vibration.

Move the forward/reverse lever (6) to the neutral position to stop the roller.

! *When starting and driving a machine that is cold, remember that the hydraulic fluid is also cold and that braking distances can be longer than normal until the machine reaches the working temperature.*

! *Never leave the operator platform without activating the parking brake (31).*

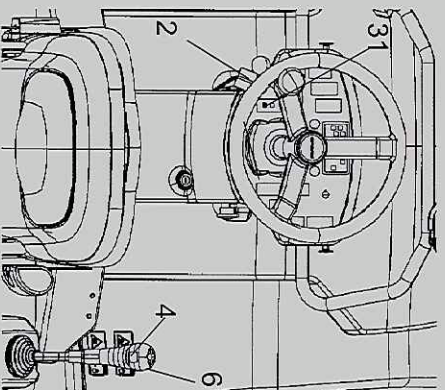


Figure. Control panel
2. Throttle control
4. Vibration On/off
6. Forward/reverse lever
31. Parking brake

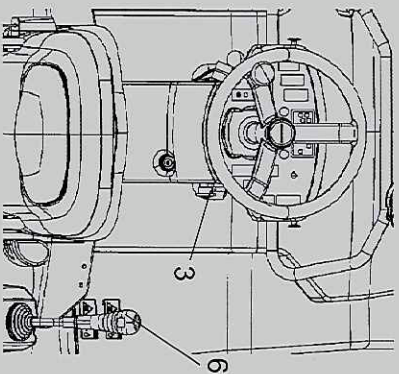


Fig. Control panel
3. Emergency stop
6. Forward/Reverse lever

Emergency braking

Braking is normally activated using the forward/reverse lever (6). The hydrostatic transmission brakes the roller when the lever is moved to the neutral position.

There is a brake in each drum motor that acts as an emergency brake during operation.



To brake in an emergency situation, push in the emergency stop knob (3), hold the steering wheel firmly and be prepared for a sudden stop. The diesel engine stops.

After emergency braking, reset the forward/reverse lever (6) to neutral position, pull out the emergency stop button and activate the parking brake. Restart the engine.

Switching off

Turn the throttle control (2) back to idling. Allow the engine to idle for a few minutes to cool.

Activate the parking brake (31).

Check instruments and warning lamps to see if any faults are indicated. Switch off all lights and other electrical functions.

Turn the starter switch (1) to the left to the switched off position. At the end of the shift, fold over the instrument cover (9) and lock.

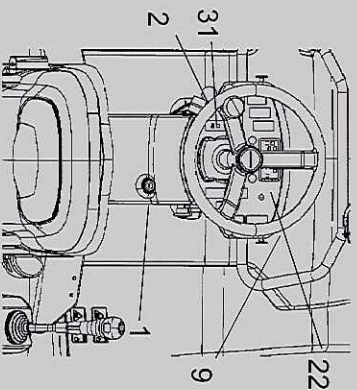


Figure. Instrument panel
1. Starter switch
2. Throttle control
9. Instrument cover
22. Panel for warning lamps
31. Parking brake

Parking

Chocking the drums

! *Never disembark from the roller when the diesel engine is running, without first activating the parking brake.*

! *Make sure that the roller is parked in a safe place with respect to other road users. Chock the drums if the roller is parked on sloping ground.*

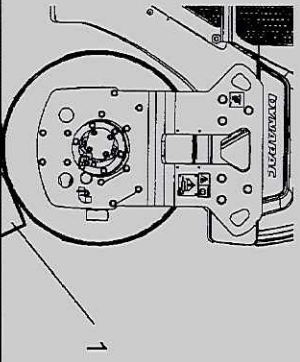


Fig. Drum part
1. Chocks



Remember that there is a risk of freezing during the winter. Empty the water tank. Fill antifreeze in the engine's cooling system. See also maintenance instructions.

Battery disconnecter

Before leaving the roller at the end of the shift, switch off the battery disconnecter (1) and remove the key.

This will prevent battery discharging and will also make it difficult for unauthorized persons to start and operate the machine. Lock also the engine cover.

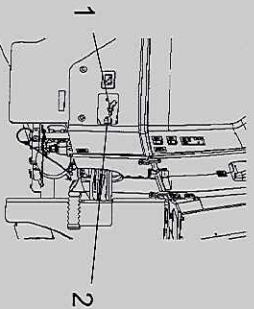


Fig. Battery bay
1. Battery disconnecter
2. Power socket, 12 V

Long-term parking



The following instructions should be followed when long term parking (more than one month).

These measures apply when parking for a period of up to 6 months.

Before re-commissioning the roller, the points marked with an asterisk * must be returned to the pre-storage state.

Wash the machine and touch up the paint finish to avoid rusting.

Treat exposed parts with anti-rust agent, lubricate the machine thoroughly and apply grease to unpainted surfaces.

Engine

* Refer to the manufacturer's instructions in the engine manual that is supplied with the roller.

Battery

* Remove the battery/batteries from the machine, clean the outside and trickle charge once a month.

Air cleaner, exhaust pipe

* Cover the air cleaner (see under the heading 'Every 50 hours of operation' or 'Every 1000 hours of operation') or its opening with plastic or tape. Also cover the exhaust pipe opening. This is to avoid moisture entering the engine.

Fuel tank

Fill the fuel tank completely full to prevent condensation.

Hydraulic reservoir

Fill the hydraulic reservoir to the uppermost level mark (see under the heading 'Every 10 hours of operation.')

Water tank

Empty the water tank completely to avoid fouling.

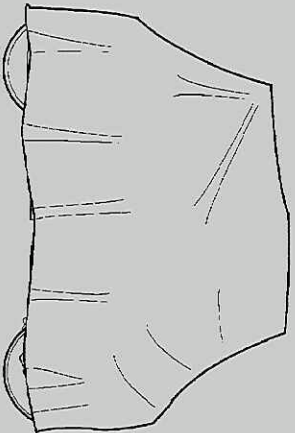


Fig. Roller weather protection

Long-term parking

Steering cylinder, hinges, etc.

Lubricate the steering joint bearings and both bearings on the steering cylinder with grease (see under the heading 'Every 50 hours of operation').

Grease the steering cylinder piston with conservation grease.

Grease the hinges on the doors to the engine compartment and the cab. Grease both ends of the forward/reverse control (bright parts) (see under the heading 'Every 500 hours of operation').

Hoods, tarpaulin

* Lower the instrument cover over the instrument panel.

* Cover the entire roller with a tarpaulin. A gap must be left between the tarpaulin and the ground.

* If possible, store the roller indoors and ideally in a building where the temperature is constant.

Miscellaneous

Lifting

Locking the articulation

! *Before lifting the roller the steering joint must be locked to prevent it turning.*

Turn the steering wheel to the straight ahead position.

Switch off the machine and activate the parking brake.

Pull down the galvanized lock bar (1) from its holder (3), and place it from underneath in the hole on the lower steering joint bracket. Press the bar through until the upper end is visible in the hole on the upper steering joint bracket.

Secure the bar with the lock pin (2).

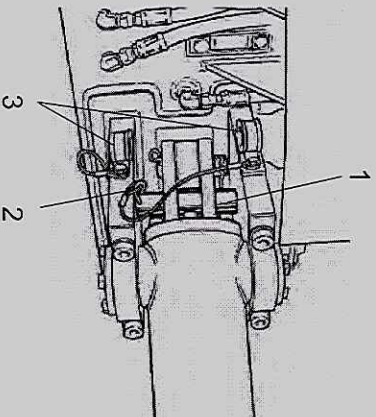


Fig. Left side of steering joint
1. Lock bar
2. Lock pin
3. Holder

Weight: refer to the hoisting plate on the roller

Lifting the roller

! *The weight of the machine is shown on the lifting plate (1). See also Technical specifications.*

! Lifting equipment such as chains, steel wires, straps and lifting hooks must be dimensioned in accordance with the relevant safety regulations for the lifting equipment.

! *Stand well clear of the hoisted machine! Make sure that the lifting hooks are properly secured.*

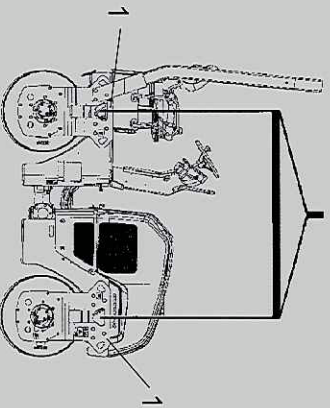


Fig. Lifting the roller
1. Lifting plate

Unlocking the articulation



Remember to refit the lock bar (1) in its holder after operation.

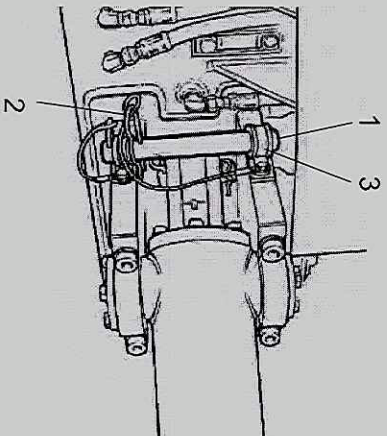


Fig. Left side of steering joint

- 1. Lock bar
- 2. Lock pin
- 3. Holder

Towing/Recovering

The roller can be moved up to 300 meters (1,000 ft) using the instructions below.

Release the brakes

! *Activate the parking brake, and stop the engine. Block the drum with a chock to prevent movement; the roller can start rolling when the brakes are released.*

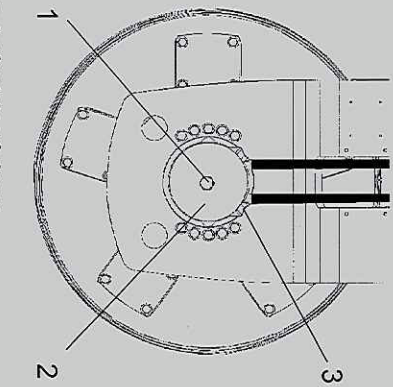


Fig. Left side of drum
1. Brake tool
2. Fastening screw
3. Disengagement nut

i The disc brake in each drive motor must be disengaged mechanically, according to below following instructions, before the roller can be towed.

Remove the center plug (4) using a screwdriver.

Screw off the brake tool (1) from its threaded fixing hole. Then fix the brake tool (1) in the center hole by tightening the screw (2) until it bottoms in the hole. Tighten the nut (3) against the brake tool until it stops, indicating that the brakes is now disengaged.

Disengaging the brakes

Screw out the nut again after towing. This returns the brakes to their normal mode. Screw off the brake tool and fit it back into its fixing holes. Refit the center plug (4) to counteract the information of rust inside the threaded hole.

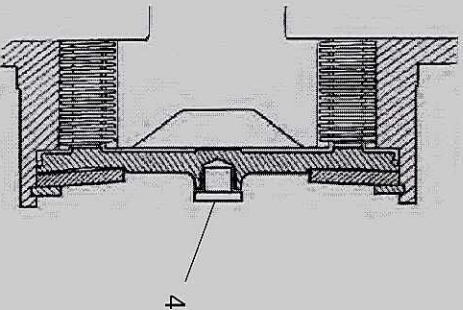


Fig. Brake housing
4. Center plug

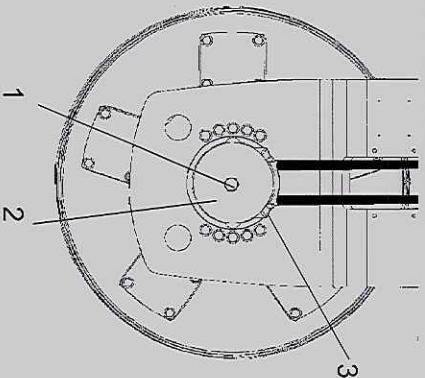


Fig. Left drum side
1. Release screw
2. Brake housing
3. Drive motor

**Releasing the brake, High torque motor
(Optional) (p/n 4700380594)**

**⚠ Activate the parking brake, and stop the engine.
Block the drum with a chock to prevent movement;
the roller can start rolling when the brakes are
released.**

ⓘ The disc brakes in each drive motor must be released mechanically as shown below before the towing the roller.

Use a key with an 18 mm socket.

Disengaging the brakes

Turn the same screws a 1 1/2 turn anticlockwise to activate the brakes again after towing.

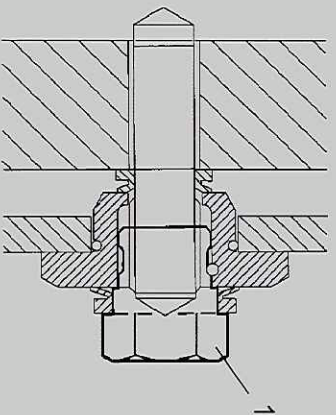


Fig. Brake housing
1. Release screw

Release the brakes on both drums.

Turn the release screw (1) a 1 1/2 turn clockwise to release the brake.

Towing the roller

! *The roller must be counter-braked during towing/recovery. Always use a towbar. There is no braking capacity on the roller now.*

i The roller must be towed slowly, max. 3 kph (2 mph) and only towed short distances, max. 300 m (1000 ft).

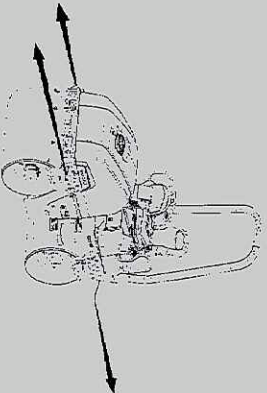


Fig. Towing

When towing/retrieving a machine, the towing device must be connected to both lifting holes. The pulling force shall act longitudinally on the machine as shown in the figure. Maximum total pulling force 130 kN (29225 lbf).

i Reverse the towing preparations.

Roller prepared for transport

! *Lock the articulation before lifting and transporting. Follow the instructions under the relevant heading.*

Activate the parking brake.

Make sure that the machine is in a neutral position, i.e. that the drums are in line.

Chock the drums (1) and secure the chocks to the transport vehicle. The drums should be chocked both forwards and backwards.

Block up under the drum frame (2), to avoid overloading the rubber suspension when lashing. Block up the machine as shown in figure.

Secure down the roller with lashing straps (3) at all four corners. The attachment points are shown on the decals. Place the chains in symmetrical pairs crossing each other.

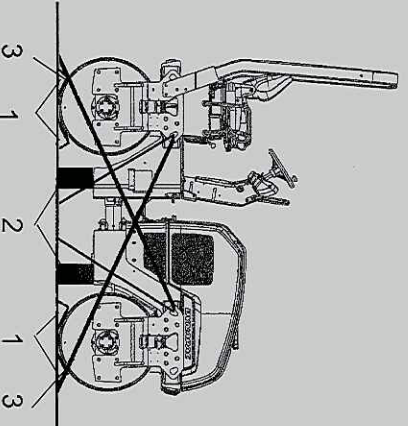


Fig. Arrangement
1. Chocks
2. Wooden blocks
3. Lashing straps

i Make sure that the chains, blocks and attachments in the transport vehicle are approved and have the requisite breaking strain. Check at regular intervals that the chains are not slack.

i Remember to reset the steering joint lock to its open position before starting the roller again.

Retractable ROPS (Optional)

The machine can be equipped with retractable ROPS.
! Risk of crush injury when raising and lowering ROPS.

! If the roller is equipped with a retractable ROPS, the machine must only be operated when it is lifted up and locked.

To retract the ROPS, release the tensioning screw (1), and pull out the pin (2) and stud (3). Do the same on both sides. Lower the ROPS backwards if there is space.

! Remember to dismantle the rotating warning light before lowering the ROPS.

! After lowering the ROPS, replace the pin and stud.

To lift the ROPS proceed in the reverse order.

! Always make sure the ROPS is locked in raised position before operation.

Grease the tensioning screw (1) and stud (3) periodically.

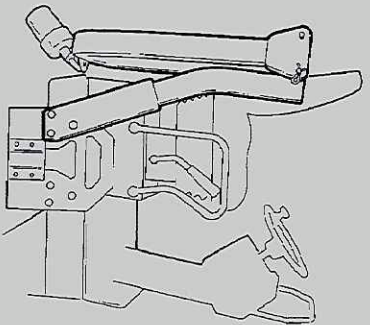


Fig.

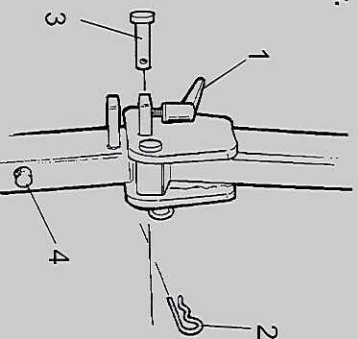


Fig. ROPS locking device

- 1. Tensioning screw
- 2. Pin
- 3. Stud
- 4. Rubber buffer

Operating instructions - Summary

- !** 1. Follow the **SAFETY INSTRUCTIONS** specified in the Safety Manual.
2. Make sure that all instructions in the MAINTENANCE section are followed.
3. Turn the master switch to the ON position.
4. Move the forward/reverse lever to the NEUTRAL position.
5. Set the switch for Manual/Automatic vibration to the 0 position.
6. Set the throttle control to more than half.
7. Set the emergency stop brake button in the pulled out position.
8. Start the engine and allow it to warm up.
9. Set the throttle control to the operating position.
- !** 10. **Drive the roller. Operate the forward/reverse lever with care.**
- !** 11. **Check the brakes, drive slowly. Remember that the braking distance will be longer if the roller is cold.**
12. Use vibration only when the roller is in motion.
13. Check that the drum and wheels are thoroughly watered when watering is required.
- !** 14. **IN AN EMERGENCY:**
 - Press the **EMERGENCY STOP BUTTON**
 - Hold the steering wheel firmly.
 - Brace yourself for a sudden stop. The engine stops.
15. Parking: - Stop the engine, chock the drum and wheels.
16. When lifting: - Refer to the relevant section in the Instruction Manual.
17. When towing: - Refer to the relevant section in the Instruction Manual.
18. When transporting: - Refer to the relevant section in the Instruction Manual.
19. When recovering - Refer to the relevant section in the Instruction Manual.

Preventive maintenance

Complete maintenance is necessary for the machine to function satisfactorily and at the lowest possible cost.

The Maintenance section includes the periodic maintenance that must be carried out on the machine.

The recommended maintenance intervals assume that the machine is used in a normal environment and working conditions.

Acceptance and delivery inspection

The machine is tested and adjusted before it leaves the factory.

On arrival, before delivery to the customer, delivery inspection must be conducted as per the check list in the warranty document.

Any transport damage must be immediately reported to the transport company.

Warranty

The warranty is only valid if the stipulated delivery inspection and the separate service inspection have been completed as per the warranty document, and when the machine has been registered for starting under the warranty.

The warranty is not valid if damage has been caused by inadequate service, incorrect use of the machine, the use of lubricants and hydraulic fluids other than those specified in the manual, or if any other adjustments have been made without the requisite authorisation.

Maintenance - Lubricants and symbols**Maintenance - Lubricants and symbols****Fluid volumes**

Hydraulic tank	45 liters	47.5 qts
Diesel engine	7 liters	7.4 qts
Drum	4 liters	4.2 qts
Coolant	5.5 liter	5.8 qts



Always use high-quality lubricants and the amounts recommended. Too much grease or oil can cause overheating, resulting in rapid wear.

DYNAPAC**ENGINE OIL**

Air temperature -15°C - +50°C
(5°F-122°F)

Shell Rimula R4 L
15W-40, API CH-4 or
equivalent.

**HYDRAULIC FLUID**

Air temperature -15°C - +50°C
(5°F-104°F)

Shell Tellus S2 V68 or
equivalent.

Air temperature over +50°C
(104°F)

Shell Tellus S2 V100 or
equivalent.

**BIOLOGICAL
HYDRAULIC FLUID,
Bio-Hydr. PANOLIN**

When it leaves the factory, the machine may be filled with biologically degradable fluid. The same type of fluid must be used when changing or topping up.

PANOLIN HLP Synth 46
(www.panolin.com)

**DRUM OIL**

Air temp. -15°C - +40°C
(5°F-104°F)

Shell Spirax S3 AX
80W/90, API GL-5

Dynapac Drum Oil 1000,
P/N 4812156456 (5 liter)

Air temperature 0°C - over
+40°C (32°F- over 104°F)

Shell Spirax AX
85W/140, API GL-5

**GREASE**

Shell Retinax LX2 or
equivalent.

Dynapac Roller Grease
(0.4kg)
P/N 4812030096

**FUEL**

See engine manual.

**COOLANT**

Anti-freeze protection down to
about -37°C (-34.6°F)






 
 





GlycoShell/Carcocoolant
774C or equivalent,
(mixed 50/50 with water)



Other fuel and lubricants are required when operating in areas with extremely high or extremely low ambient temperatures. See the 'Special instructions' chapter, or consult Dynapac.

Maintenance - Lubricants and symbols

Maintenance symbols

	Engine, oil level		Air filter
	Engine, oil filter		Battery
	Hydraulic reservoir, level		Sprinkler
	Hydraulic fluid, filter		Sprinkler water
	Drum, oil level		Recycling
	Lubricating oil		Fuel filter

Maintenance - Maintenance schedule

Maintenance - Maintenance schedule

Service and maintenance points

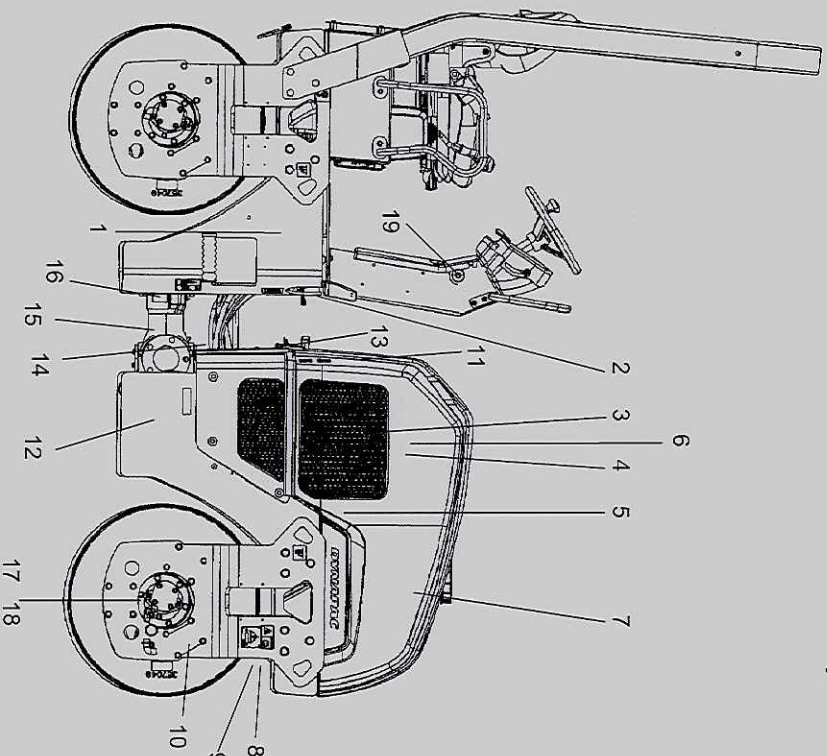


Fig. Service and maintenance points

1. Fuel tank
2. Refueling
3. Cooler
4. Air cleaner
5. Battery
6. Diesel engine
7. Water tank
8. Sprinkler system
9. Scrapers
10. Shock absorbers and attachment screws
11. Hydraulic fluid refilling
12. Hydraulic fluid tank
13. Hydraulic fluid filter
14. Hydraulic fluid level glass
15. Steering joint
16. Steering cylinder bracket
17. Filler plugs/Drum
18. Oil level in drum
19. Emergency stop