

**POLYCOOL<sup>®</sup>**  
COMMERCIAL

**PN-350, PN-550, PN-750**  
**INDUSTRIAL SPOT COOLERS**



*Model shown is PN-350*

## **User Manual**

[Revision 5.0 October 2022]

---

READ THIS MANUAL CAREFULLY BEFORE USE – FAILURE TO DO SO MAY RESULT IN INJURY, PROPERTY DAMAGE AND MAY VOID WARRANTY. • KEEP THIS MANUAL FOR FUTURE REFERENCE. • Products covered by this manual may vary in appearance, assembly, inclusions, specifications, description, and packaging.

---

# Safety

Safety messages are designed to alert you to possible dangers or hazards that could cause death, injury or equipment or property damage if not understood or followed. Safety messages have the following symbols:



You **WILL** be **KILLED** or **SERIOUSLY INJURED** if you do not follow instructions.



You **CAN** be **KILLED** or **SERIOUSLY INJURED** if you do not follow instructions.



You **CAN** be **INJURED** if you do not follow instructions or equipment damage may occur.

It is vital that you read and understand this user manual before using the product, including safety warnings, and any assembly and operating instructions. Keep the manual for future reference.

Safety precautions and recommendations detailed here must be fully understood and followed to reduce the risk of injury, fire, explosion, electrical hazard, and/or property damage.

Safety information presented here is generic in nature – some advice may not be applicable to every product. The term "equipment" refers to the product, be it electrical mains powered, battery powered or combustion engine powered.

- **Before Use** - If you are not familiar with the safe operation/handling of the equipment or are in any way unsure of any aspect of suitability or correct use for your application, you should complete training conducted by a person or organization qualified in safe use and operation of this equipment, including fuel/electrical handling and safety.
- Do NOT operate the equipment in flammable or explosive environments, such as in the presence of flammable liquids, gases, or dust. The equipment may create sparks or heat that may ignite flammable substances.
- Keep clear of moving parts.
- Equipment may be a potential source of electric shock or injury if misused.
- Do NOT operate the equipment if it is damaged, malfunctioning or is in an excessively worn state.
- Do NOT allow others to use the equipment unless they have read this manual and are adequately trained.
- Keep packaging away from children - risk of suffocation! Operators must use the equipment correctly. When using the equipment, consider conditions and pay due care to persons and property.

### General Work Area Safety

- Work areas should be clean and well lit.
- Do not operate the equipment if bystanders, animals etc are within operating range of the equipment or the general work area.
- If devices are provided for connecting dust extraction / collection facilities, ensure these are connected and used properly. Dust collection can reduce dust-related hazards.

### General Personal Safety

- Wear appropriate protective equipment when operating, servicing, or when in the operating area of the equipment to help protect from eye and ear injury, poisoning, burns, cutting and crush injuries. Protective equipment such as safety goggles, respirators, non-slip safety footwear, hard hat, hearing protection etc should be used for appropriate equipment / conditions. Other people nearby should also wear appropriate personal protective equipment. Do not wear loose clothing or jewellery, which can be caught in moving parts. Keep hair and clothing away from the equipment.
- Stay alert and use common sense when operating the equipment. Do not over-reach. Always maintain secure footing and balance.
- Do not use the equipment if tired or under the influence of drugs, alcohol, or medication.
- This equipment is not intended for use by persons with reduced physical, sensory, or mental capabilities.

### General Fuel Safety

- Petrol/fuel/gasoline is extremely flammable – keep clear of naked flames or other ignition sources.
- Do not spill fuel. If you spill fuel, wipe it off the equipment immediately – if fuel gets on your clothing, change clothing.
- Do NOT smoke near fuel or when refuelling.
- Always shut off the engine before refuelling.
- Do NOT refuel a hot engine.
- Open the fuel cap carefully to allow any pressure build-up in the tank to release slowly.
- Always refuel in well ventilated areas.
- Always check for fuel leakage. If fuel leakage is found, do not start, or run the engine until all leaks are fixed.

### General Carbon-Monoxide Safety

- Using a combustion engine indoors **CAN KILL IN MINUTES**. Engine exhaust contains carbon-monoxide – a poison you cannot smell or see.
- Use combustion engines **OUTSIDE** only, and far away from windows, doors, and vents.

### General Equipment Use and Care

- The equipment is designed for domestic use only.
- Handle the equipment safely and carefully.
- Before use, inspect the equipment for misalignment or binding of moving parts, loose components, damage, or any other condition that may affect its operation. If damaged, have the equipment repaired by an authorised service centre or technician before use.
- Prevent unintentional starting of the equipment - ensure equipment and power switches are in the OFF position before connecting or moving equipment. Do not carry equipment with hands or fingers touching any controls. Remove any tools or other items that are not a part of the equipment from it before starting or switching on.
- Do not force the equipment. Use the correct equipment for your application. Equipment will perform better and be safer when used within its design and usage parameters.
- Use the equipment and accessories etc. in accordance with these instructions, considering working conditions and the work to be performed. Using the equipment for operations different from those intended could result in hazardous situations.
- Always keep equipment components (engines, hoses, handles, controls, frames, housings, guards etc) and accessories (cutting tools, nozzles, bits etc) properly maintained. Keep the equipment clean and, where applicable, properly lubricated.
- Store the equipment out of reach of children or untrained persons. To avoid burns or fire hazards, let the equipment cool completely before transporting or storing. Never place or store the equipment near flammable materials, combustible gases, or liquids etc.
- The equipment is not weather-proof, and should not be stored in direct sunlight, at high ambient temperatures or locations that are damp or humid.
- Do not clean equipment with solvents, flammable liquids, or harsh abrasives.
- For specific equipment safety use and care, see Equipment Safety.

**General Electrical Safety**

- Inspect electrical equipment, extension cords, power bars, and electrical fittings for damage or wear before each use. Repair or replace damaged equipment immediately.
- Ensure all power sources conform to equipment voltage requirements and are disconnected before connecting or disconnecting equipment.
- When wiring electrically powered equipment, follow all electrical and safety codes.
- Wherever possible, use a residual current device (RCD).
- High voltage / high current power lines may be present. Use extreme caution to avoid contact or interference with power lines. Electrical shock can be fatal.

**General Electrical Safety**

- Electrically grounded equipment must have an approved cord and plug and be connected to a grounded electrical outlet.
- Do NOT bypass the ON/OFF switch and operate equipment by connecting and disconnecting the electrical cord.
- Do NOT use equipment that has exposed wiring, damaged switches, covers or guards.
- Do NOT use electrical equipment in wet conditions or in damp locations.
- Do NOT use electrical cords to lift, move or carry equipment.
- Do NOT coil or knot electrical cords, and ensure electrical cords are not trip hazards.

**General Service Information**

- The equipment must be serviced or repaired at authorised service centres by qualified personnel only.
- Replacement parts must be original equipment manufacturer (OEM) to ensure equipment safety is maintained.
- Do NOT attempt any maintenance or repair work not described in this manual.
- After use, the equipment and components may still be hot – allow the equipment to cool and disconnect spark plugs and/or electrical power sources and/or batteries from it before adjusting, changing accessories, or performing repair or maintenance.
- Do NOT adjust while the equipment is running.
- Perform service-related activities in suitable conditions, such as a workshop.
- Replace worn, damaged or missing warning/safety labels immediately.

**Industrial Spot Cooler Safety**

- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.
- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.
- Disconnect the appliance from its power source during service and when replacing parts.
- Please do not use air cooler in places that use or store volatile substances (dilutents, gasoline, kerosene, liquefied gas and other volatile liquids; magnesium, aluminium, lead and other volatile dusts and vapours) to avoid possible ignition, explosion, fire and burn injuries.
- Please do not remould for use, which may lead to machine breakdown or even fire, etc.
- Except for professional maintenance personnel, other personnel are not allowed to assemble or disassemble to avoid fire, electrocution, injury, and other safety accidents. If repair is needed, please contact an authorised service centre.
- Do not use it in places with rain, snow, and/or water. Do not operate with wet hands.
- Use a 220-240V/50Hz power supply. Otherwise, there might be a machine breakdown or safety accident.
- Use a separate 20A rated current socket. Use of socket with other electrical appliances may cause error.
- Assign professionals to operate according to equipment standard and wiring upon installation. Otherwise, there may be safety accident.
- Do not go near fire sources to avoid damaging the machine.
- Equip safe and reliable ground lead and use leakage protector.
- Use it in specified range of 18 - 45°C, otherwise there may be a machine breakdown.
- Do not move the air cooler when the machine is running. Ensure to set the castor brake to locked status.
- Please immediately stop using it in case of error (stopped rotation, strange noise, improper vibration, and unusual odour).
- To prevent disaster and damage, air cooler cannot be used in the following places:
  - Vibrating floor
  - Gradient floor
  - Stairway, emergency exit and house exit and entrance, etc.
  - Places with unstable articles piled around
  - Windy and moist places or places with floating metallic powder
- Grip the plug when pulling it off instead of pulling on the power line directly. Otherwise, it may damage the plug, or cause sparks or safety accidents.
- Pull the power plug off the socket if the machine is not used for an extended period.
- To prevent electrocution, please pull the power plug off the socket upon installation and maintenance.
- Please use a dry, clean cloth to wipe away any dirt/dust on the power plug. Dusty or moist plug can cause poor contact or electric leakage, leading to safety accidents.
- Do not haphazardly bend, drag, twist, pinch or change the power line. Do not overload the power line. Otherwise, it could start a fire, cause electrocutions and other accidents.
- Please do not use it on boats, vehicles, etc. Otherwise, there could be safety accidents.
- Please do not stick fingers or hands in the vent.

# Safety Symbols

The product may have safety warning labels attached to it, explained below. Understand the symbols on your product and their meanings. If any stickers become unreadable, unattached etc., replace them.


 <p><b>Flammable Material Hazard</b> Flammable liquids, gases, or substances etc may present. Avoid ignition sources and open flames. Danger of fire.</p>	 <p><b>Read User Manual</b> Read and fully understand product safety warnings, operation, procedures etc before using the product.</p>	 <p><b>Use Hand Protection</b> Wear appropriate hand protection and take due care as the product or use of the product may present hand hazards.</p>	 <p><b>Carbon-Monoxide Hazard</b> Do not use the product in confined areas or without adequate ventilation. Carbon-monoxide poisoning can be fatal.</p>
 <p><b>Electrocution / Electrical Shock Hazard</b> High voltage or high current electricity may be present or required by the product. Take due care when handling electrical products, cables, plugs and leads. Electrical shock can be fatal.</p>	 <p><b>Toxic Fumes / Dust Hazard</b> Using the product or by-products from use may produce fumes, smoke or particles that could be harmful if inhaled. Wear appropriate breathing protection and have adequate ventilation.</p>	 <p><b>Explosive Material Hazard</b> Combustible liquids, gases, or substances etc may be present. Avoid ignition sources and open flames. Danger of explosion.</p>	 <p><b>Cutting / Amputation Hazard</b> The product may have blades, edges or mechanical devices that can cause severe cut injury to fingers, limbs etc. Take due care when handling and using the product.</p>
 <p><b>Crush Hazard</b> The product may have blades, edges or mechanical devices that can cause severe crush injury to fingers, limbs etc. Take due care when handling and using the product.</p>	 <p><b>Single Operator Only</b> The product must be operated by a single person only. More than one person operating the product may introduce additional hazards.</p>	 <p><b>Use Face Protection</b> Wear appropriate full-face protection and take due care as the product or use of the product may present face and eye hazards.</p>	 <p><b>Use Foot Protection</b> Wear appropriate foot protection and take due care as the product or use of the product may present foot hazards.</p>
 <p><b>Use Eye / Ear / Head Protection</b> Wear appropriate eye and / or ear and / or head protection and take due care as the product or use of the product may present eye, hearing, and head hazards.</p>	 <p><b>Running Hazard</b> Do not run on or near the product as doing so may present a fall hazard.</p>	 <p><b>Diving Hazard</b> Do not dive into the product as doing so may present a neck / head injury hazard.</p>	 <p><b>Adult Supervision Required</b> Always supervise children and other users of a product to prevent drowning or injury.</p>
 <p><b>Skin Penetration / Puncture Hazard</b> The product may produce pressure, emit liquids or objects that can cause severe injury to fingers, limbs, blood etc. Take due care when handling and using the product.</p>	 <p><b>Hot Surface Hazard</b> Be aware that the product may produce high temperatures and hot surfaces that can cause burn injuries.</p>	 <p><b>Flying Debris Hazard</b> Be aware that the product or use of the product may present hazards produced by flying debris. Wear appropriate clothing and protective devices.</p>	 <p><b>Moving Parts Hazard</b> Be aware that the product contains or uses mechanical devices that move or rotate. Always wait for moving parts to stop fully before handling the product, adjusting, maintenance etc.</p>

 <p><b>Carbon-Monoxide Hazard</b> Do not use the product in confined areas or without adequate ventilation. Carbon-monoxide poisoning can be fatal.</p>	 <p><b>Pull Hazard</b> Be aware that the product contains or uses mechanical devices that can pull in objects and can cause severe injury to fingers, limbs etc. Take due care when handling and using the product.</p>	 <p><b>Slope / Fall Injury Hazard</b> Be aware that using the product on sloping surfaces or in slippery conditions may present additional dangers from falls and contact with blades, moving parts, hot surfaces etc.</p>	 <p><b>"Slam Dunk" Warning</b> Do NOT attempt "slam dunk" manoeuvres as this may result in severe injury due to falling, product breakage or collapse etc.</p>
 <p><b>Electrocution / Electrical Shock Hazard - Outdoor</b> High voltage or high current electricity may be present or required by the product. Do NOT use in rain, damp, or wet conditions. Electrical shock can be fatal.</p>	 <p><b>Electrocution / Electrical Shock Hazard - Disconnect</b> High voltage or high current electricity may be present or required by the product. Always disconnect the product from the electrical supply before handling the product, adjusting, maintenance etc.</p>	 <p><b>Power Line Electrocution Hazard</b> High voltage / high current power lines may be present. Use extreme caution to avoid contact or interference with power lines. Electrical shock can be fatal.</p>	 <p><b>"Kick-Back" Hazard</b> High level of "kick-back" hazard that can cause the machine to suddenly rotate towards operator. Kick-back injury can be fatal.</p>
 <p><b>Winch Operator Position Hazard</b> Do NOT stand between winch and load. Do NOT use winch to move people.</p>	 <p><b>Winch Lift Hazard</b> Do NOT LIFT load vertically. Use machine to PULL only.</p>	 <p><b>Cable Hazard</b> Ensure that load bearing cable is not kinked or knotted.</p>	 <p><b>Winch Cable Hazard</b> Ensure that there is a minimum number of cable coils on winching mechanism.</p>
 <p><b>Winch Hook Hazard</b> Carry hook to load – do NOT throw or run.</p>	 <p><b>Flash / Blinding Hazard</b> Wear appropriate eye protection for welding. Direct exposure to weld arcs may cause permanent eye injury.</p>	 <p><b>Laser Hazard</b> Laser may be in use – do NOT look directly at laser or allow others to.</p>	

# Table of Contents

<b>Safety</b> .....	<b>2</b>
Safety Symbols .....	4
<b>Parts Identification</b> .....	<b>7</b>
<b>Spare Parts</b> .....	<b>8</b>
<b>Installation</b> .....	<b>9</b>
Installing the Connector .....	9
Installing the Cold Exhaust Pipe .....	9
Cutting the Extension Pipe .....	10
Reducing the Diameter of the Extension Pipe .....	10
Connecting the Extension Pipe .....	10
<b>Operation</b> .....	<b>11</b>
Selecting Fan Strength .....	11
Compressor Overheat and Overload Protection .....	11
Adjustment Range of Exhaust Pipes .....	11
Water Tank Operation .....	12
Drainpipe (optional) .....	12
Requirements for Operation Site .....	12
<b>Maintenance</b> .....	<b>13</b>
<b>Troubleshooting</b> .....	<b>14</b>
<b>Specifications</b> .....	<b>15</b>
PN-350 .....	15
PN-550 .....	15
PN-750 .....	16

## Parts Identification

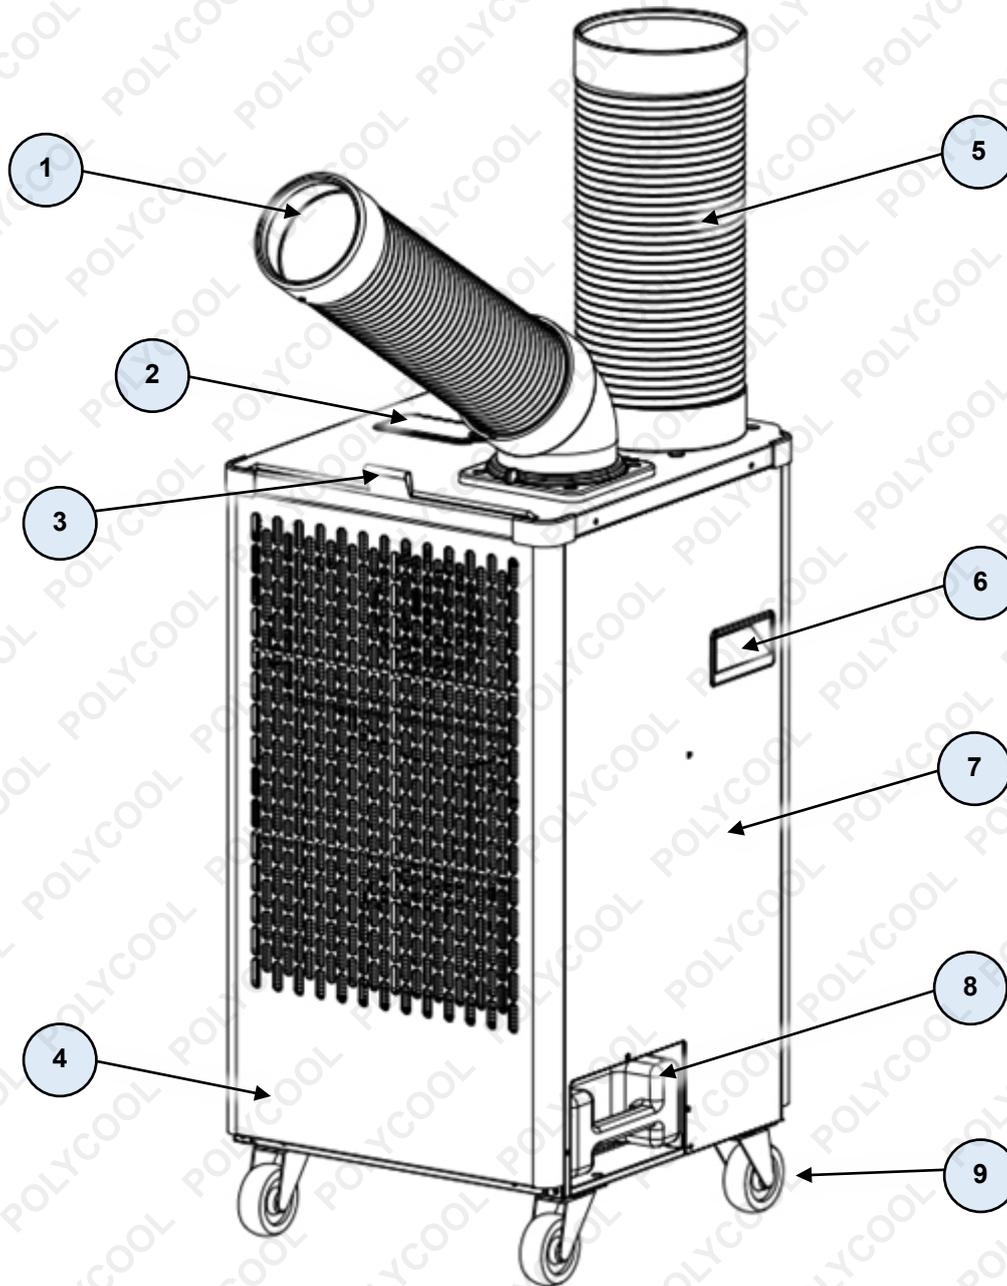

Note: Model shown is PN-350

No.	Name
1	Cold exhaust pipe
2	Switch Box
3	Filter screen
4	Front shell
5	Hot exhaust pipe
6	Handle
7	Right plate
8	Water tank
9	Castor wheels

# Spare Parts



Spare parts available for purchase, scan QR code/s below:

QR Code	SKU
---------	-----



AIRINDPLYA35K



AIRINDPLYA55K



AIRINDPLYA75K


# Installation

## Installing the Connector

Direct the turning of the connector to the dent of the detachable elbow base on the machine. Insert and rotate it anti-clockwise. The elbow is in place when a clicking sound is heard.


## Installing the Cold Exhaust Pipe

Align the turning of the cold exhaust pipe to the dent of the cold exhaust pipe, insert and rotate it to the left to secure it in place.

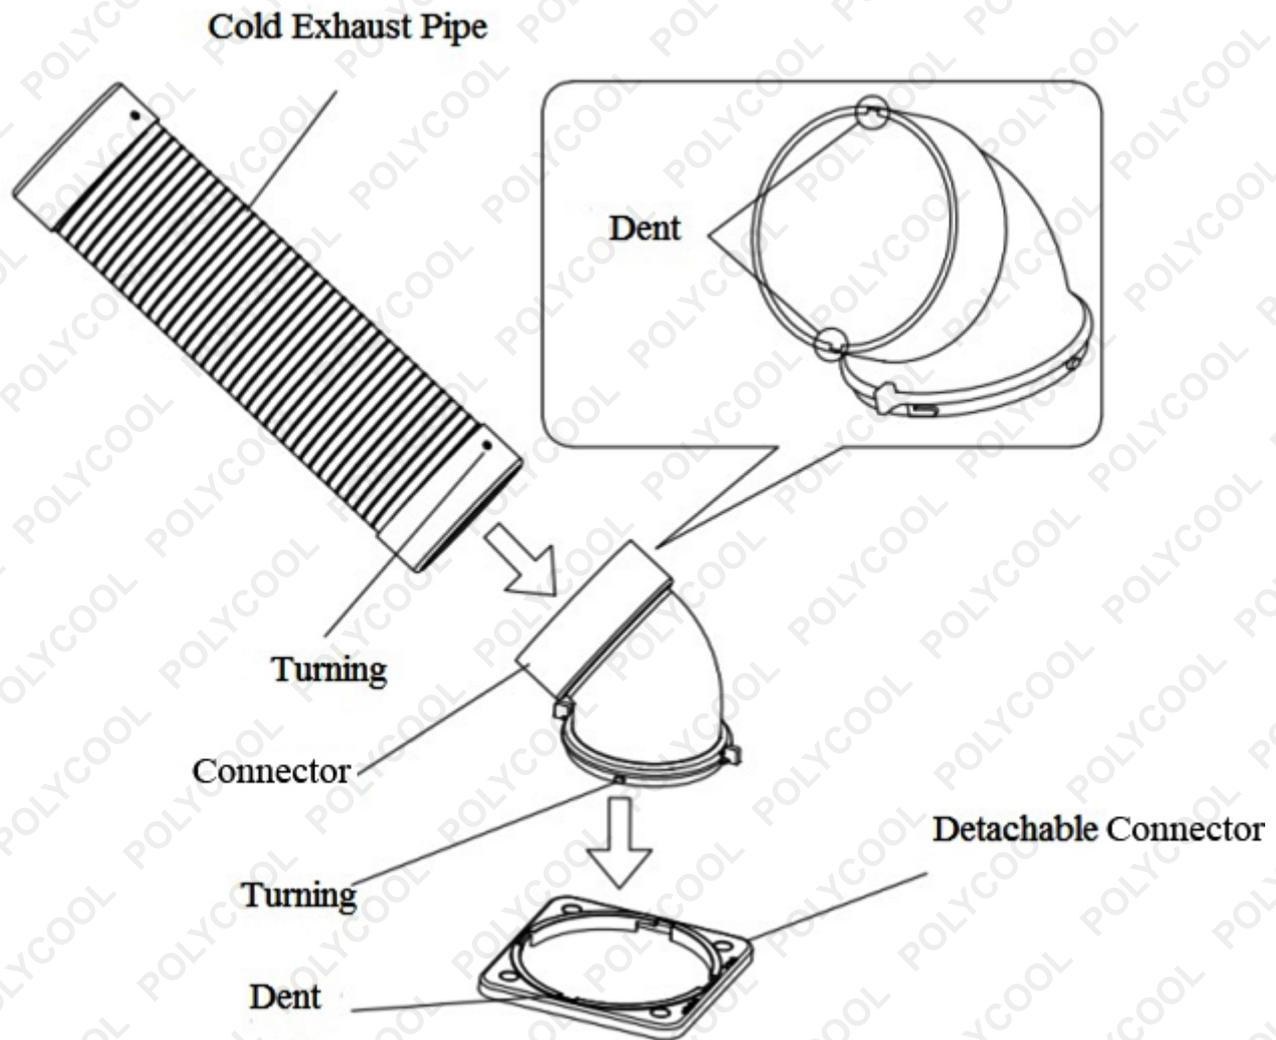

## Cutting the Extension Pipe

1. Cut the extension pipe based on the required length needed.
2. As shown in the figure below, separate the exhaust pipe from the groove with a flathead screwdriver or other sharp tools at the location where it is supposed to be cut, and cut it off with pliers or scissors.

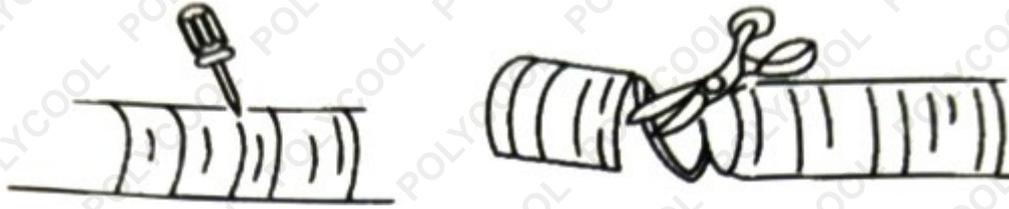


## Reducing the Diameter of the Extension Pipe

Rotate the pipe in a clockwise direction to reduce the diameter of the pipe opening.



## Connecting the Extension Pipe

1. Detach the joint of the hot exhaust pipe and cover the extension pipe outside the hot exhaust pipe.
2. Screw the end tight and ensure it is secure. Use a strong adhesive tape to secure it, if necessary.
3. Use binders to secure the attached pipe opening of the extended hot exhaust pipe.

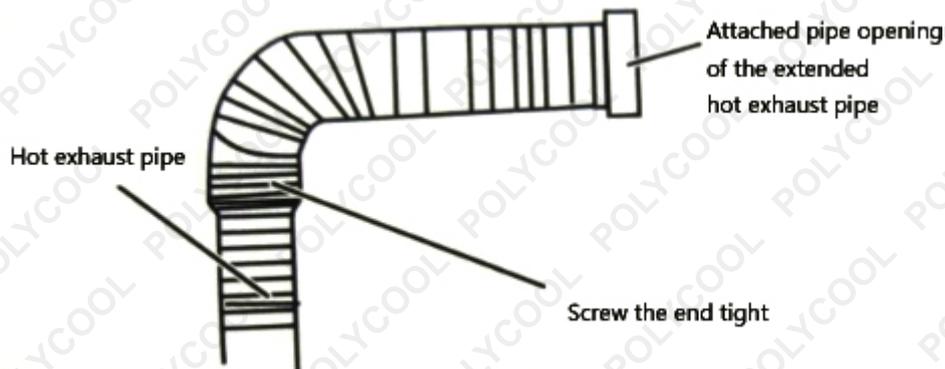

# Operation

## Selecting Fan Strength

- Rotate the selecting switch on the cover of the machine to  or  and the compressor immediately launches into refrigeration. In the meantime, start the draught fan to blow air out. The blast capacity has  or  for customer to choose from.
- When the switch is rotated to "0", the machine is turned OFF and stops running.



**ATTENTION!** Turn the selecting switch OFF and cut the power off before moving the machine. When the machine is off, it may be restarted after 3 minutes.

## Compressor Overheat and Overload Protection

- Overly high or low voltage and overly high ambient temperature can cause the compressor to overheat and overload. To protect the compressor, the overload protector will be activated to cut the power of the compressor OFF.




**ATTENTION!** When the overload protector is activated, the machine only blows out natural air but does not cool it. If the overload protector is activated frequently, please find out and eliminate the cause before using the machine.

## Adjustment Range of Exhaust Pipes

- Cold air pipe may rotate left or right to 360° (hot air pipe is installed).
- Cold air pipe may be moved up or down to 150°.
- The range of adjustment angle for hot air pipe is 45°.



**ATTENTION!** Adjust the cold exhaust pipe in advance and use the air-out direction of the hot exhaust pipe later. When adjusting the air-out angle of the cold exhaust pipe, please grip the connector to do adjustments and do not hold the cold exhaust pipe directly.

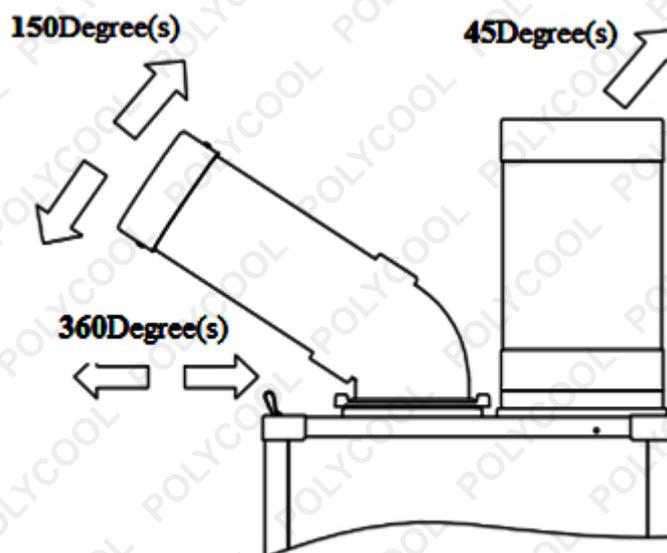

## Water Tank Operation


When the water in the tank and the water level indicator are parallel with each other, set the gear to 0, pour the water out and re-install the water tank. Choose a gear to make it work properly.



**ATTENTION!** Please do not move the machine when the water is full. Pour the water before moving it.

## Drainpipe (optional)

Condensate water may be discharged with a drainpipe (not included in some units). Take the water tank out and install the drainpipe directly on the drainage of the tank to cross the round hole on the corresponding side plate.

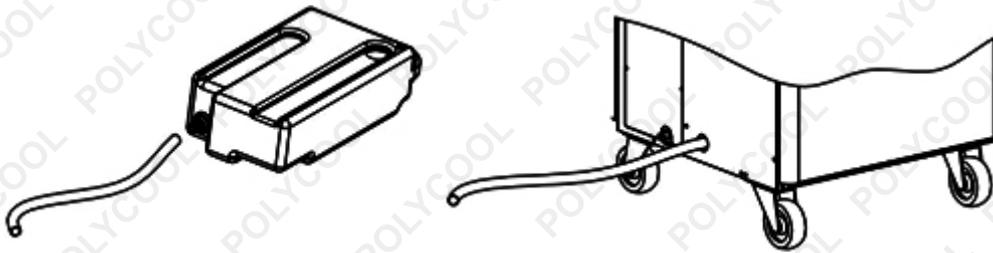


## Requirements for Operation Site

- When the machine is running, both the filter screen and the cold air pipe should be 30cm or more from walls or other obstacles. The hot exhaust pipe should be 80cm or more from walls, ceilings, or other obstacles.
- The machine must be placed on a flat, stable ground. To avoid accidents, do not place it on slopes, rugged terrains, entrances or exits, etc.
- To avoid accidents, do not use it in the rain, snow, and other wet/humid environment.



**ATTENTION!** Do not place obstacles in front of the filter screen or air outlet of the cold air pipe and the hot exhaust pipe. Please do not direct hot air from the hot exhaust pipe towards flammable objects.

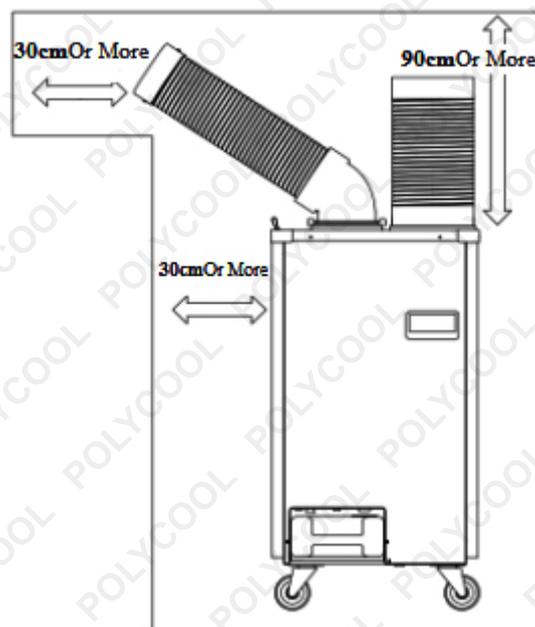

# Maintenance

- Clean the filter screen regularly. Dust and dirt on the filter screen may affect the air supply and cause frosting of the heat exchanger, leading to a possible machine breakdown.
- For filter screen cleaning, carefully remove it from the unit and use a vacuum cleaner to suck dust out of the filter screen and then use clean water to wash it. Re-install it when it is completely dry.



**ATTENTION!** When cleaning machine surfaces, please do not use diluents, volatile oils, and other cleaning agents that may damage surfaces.

- Check if the power line is broken. If so, have it replaced immediately.
- Check if any screws are loose. If so, re-screw them tightly.
- Before long-term storage of the machine or when it will not be used for an extended period, pour out the water in the water tank and re-install it when the tank is dry.
- Do not place or store the machine horizontally or upside down.
- Store the machine where kids cannot reach or access it. Avoid storing it in places with high ambient temperatures, rain exposure or direct sunlight.



**ATTENTION!** Pull out the power plug when changing parts during maintenance and checks. Pull the power plug out when storing the machine.

# Troubleshooting

If the spot cooler breaks down, please cut the power off immediately and pull the power plug out from the socket to check the following.

<b>Fault</b>	<b>Possible Cause</b>	<b>Possible Solution</b>
<b>Unit does not operate</b>	Power plug is loose or fell off	Please insert the power plug firmly in the power socket
	Burnt fuse	Ask a professional technician or service centre to replace the fuse
<b>Unit does not blow cold air</b>	Heat exchanger surface is blocked with debris	Clean heat exchanger surface to ventilate it and to release excess heat
	Hot exhaust blower failure	Repair or replace hot exhaust blower
	External temperature is too high	Please use it in a proper place with proper spacing requirements
	Compressor capacitor is damaged	Replace compressor capacitor
	Refrigerating system pipeline is clogged	Replace pipeline system or remove the obstacle
	Overly high or low input voltage	Please select the proper voltage
	Overheated compressor and overload protection fails	Restart after cooling
	Failed compressor motor	Repair or replace compressor
<b>Water Leakage</b>	Drainpipe opening is clogged	clear the drainpipe
	Water tank position is placed improperly	Reset it
	Filter screen has dust and filth	Please clean filter screen
	Water tank is full	Pour water out of the water tank

# Specifications

## PN-350



<b>Air Volume</b>	400m <sup>3</sup> /h
<b>Rated Voltage</b>	220 - 240V/50Hz
<b>Power Plug</b>	10A Australian Standard
<b>Refrigerating Capacity</b>	9200 Btu (2.7kW)
<b>Operating Temperature</b>	18-45°C
<b>Refrigerant</b>	R410a /460g
<b>Noise Level</b>	55dB
<b>Condensation Tank</b>	5L
<b>Power Cord Length</b>	1.9m
<b>Extended duct length</b>	1.2m

*Note: Minimal Assembly required*

## PN-550



<b>Air Volume</b>	800m <sup>3</sup> /h
<b>Rated Voltage</b>	220-240V/50Hz
<b>Power Plug</b>	15A
<b>Refrigerating capacity</b>	15,300 BTU (4.5kW)
<b>Operating Temperature</b>	18-45°C
<b>Refrigerant</b>	R410a /800g
<b>Noise Level</b>	60dB
<b>Condensation tank</b>	8L
<b>Power cord length</b>	1.9m
<b>Extended duct length</b>	1.2m

*Note: Minimal Assembly required*

## PN-750



<b>Air Volume</b>	1200m <sup>3</sup> /h
<b>Rated Voltage</b>	220-240V/50Hz
<b>Power Plug</b>	15A
<b>Refrigerating Capacity</b>	22,200 BTU (6.5kW)
<b>Operating Temperature</b>	18-45°C
<b>Refrigerant</b>	R410a / 1050g
<b>Noise Level</b>	65dB
<b>Condensation Tank</b>	13L
<b>Power Cord Length</b>	1.9m
<b>Extended duct length</b>	1.2m

*Note: Minimal Assembly required*



**Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. To help reduce your risk of serious injury or death, refer to the information below. For more information, see [www.datastreamserver.com/safety](http://www.datastreamserver.com/safety)**

- Consult all documentation, packaging, and product labelling before use. Note that some products feature documentation available online. It is recommended to print and retain the documentation.
- Before each use, check the product for loose/broken/damaged/missing parts, wear, or leaks (if applicable). Never use a product with loose/broken/damaged/missing parts, wear, or leaks.
- Products must be inspected and serviced (if applicable) by a qualified technician every 6 months. This is based on average residential use by persons of average size and strength, and on a property of average metropolitan size. Use beyond these recommendations may require more frequent inspections/servicing.
- Ensure that all users of the product have completed a suitable industry recognised training course before being allowed access to the product.
- The product has been supplied by a general merchandise retailer that may not be familiar with your specific application or description of application. Be sure to attain third-party approval from a qualified specialist for your application before use, regardless of any assurances from the retailer or its representatives.
- This product is not intended for use where fail-safe operation is required. As with any product (for example, automobile, computer, toaster), there is the possibility of technical issues that may require the repair or replacement of parts, or the product itself. If the possibility of such failure and the associated time it may take to rectify could in any way inconvenience the user, business, or employee, or financially affect the user, business, or employee, then the product is not suitable for your requirements. This product is not intended for use where incorrect operation or a failure of any kind, including but not limited to, a condition requiring product return, replacement, parts replacement, or service by a technician may cause financial loss, loss of employee time or an inconvenience requiring compensation.
- If this product has been purchased in error when considering the information presented here, contact the retailer directly for details of their returns policy, if required.

